

N1200 CONTROLLER

USER GUIDE V2.0x O



Distributed by:Temperature & Process Instruments, Inc., 1767 Central Park Ave., Suite 112, Yonkers, NY 10703Phone: 914-673-0333Web Site: www.tnp-instruments.com

1. SAFETY ALERTS4				
2. INTRODUCTION				
3. CONFIGURATION / FEATURES				
3.1 INPUT TYPE SELECTION	6			
3.2 CONFIGURATION OF OUTPUTS, ALARMS AND DIGITAL INPUTS				
3.3 ALARM CONFIGURATION				
3.3.1 ALARM TIMER MODES				
3.3.2 ALARM INITIAL BLOCKING				
3.4 EXTRACTION OF THE SQUARE ROOT				
3.5 ANALOG RETRANSMISSION OF PV AND SP				
3.6 SOFT START				
3.7 REMOTE SETPOINT				
3.8 CONTROL MODE				
3.9 PID AUTOMATIC MODE				
3 10 I BD - I OOP BREAK DETECTION ALARM	11			
3 11 HBD - HEATER BREAK DETECTION	11			
3 12 SAFE OUTPUT VALUE WITH SENSOR FAILURE				
4.2.2 INPUT CONNECTIONS				
4.2.5 ALARMS AND OUTPUTS CONNECTIONS				
5. OPERATION				
6. DESCRIPTION OF THE PARAMETERS				
6.1 OPERATION CYCLE				
6.2 IUNING CYCLE				
6.3 PROGRAMS CYCLE				
6.4 ALARM CYCLE				
6.5 SCALE CYCLE				
6.6 I/O (INPUTS AND OUTPUTS) CYCLE				
6.7 CALIBRATION CYCLE				
6.8 ALL PARAMETERS				
7. CONFIGURATION PROTECTION				
7.1 ACCESS PASSWORD	21			
7.2 PROTECTION OF THE ACCESS CODE				
7.3 MASTER PASSWORD	21			
8. RAMPS AND SOAKS PROGRAMS				
8.1 LINK OF PROGRAMS				
8.2 EVENT ALARM				
9. PID PARAMETERS DEFINITION				
9.1 AUTOMATIC TUNING				
9.2 AUTO-ADAPTIVE TUNING				
10. MAINTENANCE				
10.1 PROBLEMS WITH THE CONTROLLER				

10.2	INPUT CALIBRATION	25
10.3	ANALOG OUTPUT CALIBRATION	25
11. SERIAL	COMMUNICATION	26
11.1	FEATURES	26
11.2	CONFIGURATION OF PARAMETERS FOR SERIAL COMMUNICATION	26
11.3	COMMUNICATION PROTOCOL	26
11.4	HOLDING REGISTERS TABLE	26
12. CONFIC	GURATION EXAMPLES	28
13. SPECIF	ICATIONS	29
14. IDENTI	FICATION	30
15. WARRA	NTY	31
16. ATTACI	HMENT 1 – COMMUNICATION PROTOCOL	32
16.1	COMMUNICATION INTERFACE	32
16.2	RS485 INTERFACE	32
16.3	GENERAL FEATURES	32
16.4	COMMUNICATION PROTOCOL	32
16.4.1	SETTING THE COMMUNICATION PARAMETERS	32
16.4.2	REGISTER TABLE	33
16.4.3	STATUS WORDS	60
16.5	EXCEPTION RESPONSES - ERROR CONDITIONS	61
16.6	CONFIGURING I/O PARAMETERS	61
16.6.1	N1200 CONTROLLER	61
16.6.2	N1200-HC CONTROLLER	62

1. SAFETY ALERTS

The symbols below are used in the device and throughout this manual to draw the user's attention to important information related to device safety and use.



All safety recommendations appearing in this manual must be followed to ensure personal safety and prevent damage to the instrument or system. If the instrument is used in a manner other than that specified in this manual, the device's safety protections may not be effective.

2. INTRODUCTION

N1200 is an extraordinarily versatile process controller. It accepts in a single model all the sensors and signals used in the industry and provides the main output types required for the operation of diverse processes.

Configuration can be performed either directly on the controller or via the USB interface once **QuickTune** software has been installed on the computer to be used. Once connected to USB, the device will be recognized as a serial communication (COM) port operating with Modbus RTU protocol.

Through the USB interface, even if disconnected from the power supply, the configuration performed in a piece of equipment can be saved in a file and repeated in other pieces of equipment that require the same configuration.

It is important that the users carefully read this manual before using the controller. Verify if the release of this manual matches the instrument version (the firmware version is shown when the controller is energized).

N1200 main characteristics are:

- Multi-sensor universal input
- Protection for open sensor in any condition
- Relay, 4-20 mA and logic pulse control outputs all available in the standard model
- Self-tuning of PID parameters
- Automatic / Manual function with Bumpless transfer
- Four modes of independents alarms, with functions of minimum, maximum, differential (deviation), open sensor and event
- Timer functions that can be associated to the alarms
- Retransmission of PV or SP in 0-20 mA or 4-20 mA
- Input for remote Setpoint
- Digital input with 5 functions
- Programmable Soft Start
- 20 setpoint profile programs with 9 segments each, with the ability to be linked together for a total of 180 segments
- Password for parameters protection
- Universal power supply.

3.1 INPUT TYPE SELECTION

During equipment configuration, you must set the input type to be used. The table below shows the available options:

TYPE	CODE	MEASUREMENT RANGE		
J	tc J	Range: -110 to 950 °C (-166 to 1742 °F)		
К	tc Y	Range: -150 to 1370 °C (-238 to 2498 °F)		
Т	tc t	Range: -160 to 400 °C (-256 to 752 °F)		
Ν	tc n	Range: -270 to 1300 °C (-454 to 2372 °F)		
R	tc r	Range: -50 to 1760 °C (-58 to 3200 °F)		
S	tc 5	Range: -50 to 1760 °C (-58 to 3200 °F)		
В	tc b	Range: 400 to 1800 °C (752 to 3272 °F)		
E	tc E	Range: -90 to 730 °C (-130 to 1346 °F)		
Pt100	PŁ	Range: -200 to 850 °C (-328 to 1562 °F)		
0-20 mA	L020			
4-20 mA	L420			
0-50 mV	L050	Linear Signals Programmable indication from -1999 to 9999.		
0-5 Vdc	L0,5			
0-10 Vdc	LO, 10			
	Ln J			
	Ln Y			
	Ln E			
∕I-20 m∆	Lnn	Non-Linear Analog Signals		
NON-LINFAR	Ln r	Indication range depends on the selected sensor.		
	Ln 5			
	Ln b			
	Ln E			
	L _ጥ ዖይ			

Table 1

Note: All input types are factory calibrated.

3.2 CONFIGURATION OF OUTPUTS, ALARMS AND DIGITAL INPUTS

The controller has input and output channels (I/O) that can assume multiple functions: control output, digital input, digital output, alarm output, and PV and SP retransmission. These channels are identified as I/O1, I/O2, I/O3, I/O4, and I/O5.

The basic controller model has the following features:

- I/O1 Relay Output SPST-NO
- I/O2 Relay Output SPST-NO
- I/O5 Current output, digital output, digital input

Optionally, other features can be added, as shown under the item <u>IDENTIFICATION</u> in this manual:

- **3R** I/O3 with SPDT relay output
- **DIO** I/O3 and I/O4 as digital input and output channels
- HBD Heater break detect
- 485 Serial Communication

The function to be used in each channel of I/O is defined in accordance with the options shown in the table below:

I/O FUNCTION	CODE	I/O TYPE
Without Function	oFF	Output
Alarm 1 Output	RI	Output
Alarm 2 Output	82	Output
Alarm 3 Output	ER	Output
Alarm 4 Output	RY	Output
LBD (Loop Break Detection)	Lbd	Output
Control Output (Relay or Digital Pulse)	ctrL	Output
Automatic / Manual mode selection	ī.Rn	Digital Input
Run / Stop mode selection	run	Digital Input
Remote SP selection	r SP	Digital Input
Setpoint profile program HOLD (Freezes program execution)	HPrG	Digital Input
Setpoint Profile Program 1 selection	Pr l	Digital Input
0 to 20 mA control output selection	C.0.20	Analogical Output
4 to 20 mA control output selection	C.420	Analogical Output
PV Retransmission (0 to 20 mA)	P.0.20	Analogical Output
PV Retransmission (4 to 20 mA)	P.420	Analogical Output
SP Retransmission (0 to 20 mA)	5.0.20	Analogical Output
SP Retransmission (4 to 20 mA)	5.420	Analogical Output

Table 2

During channel configuration, only the valid options for each channel will be shown on the display. These functions are described below:

•FF – NO FUNCTION

The I/O channel programmed with code **oFF** will not be used by the controller. Although without function, this channel is available through the serial communication as digital I/O (command 5 Modbus).

A I, A2, A3, A4 - ALARM OUTPUTS

The selected channel can be used as output to Alarms 1 to 4. Defines that the programmed I/O channel acts as alarm outputs. Available to all I/O channels.

Lbd – LOOP BREAK DETECTOR FUNCTION

Assigns the output of the Loop Break Detector alarm to an I/O channel. Available to all I/O channels.

ELFL - PWM CONTROL OUTPUT

Defines the I/O channel to be used as the PWM control output (relay or digital pulse). The digital pulse is available on I/O5 (standard) or on I/O3 and I/O4 (when the DIO optional is installed). Check the specifications of each channel. Available to all I/O channels.

TRo - DIGITAL INPUT WITH AUTO/MANUAL FUNCTION

Defines the I/O channel as Digital Input with the function of switching the control mode between Automatic and Manual.

- Closed Manual control;
- **Open** Automatic control

Available on I/O5 (standard) or on I/O3 and I/O4 (when the DIO optional is installed).

run - DIGITAL INPUT WITH RUN FUNCTION

Defines channel as Digital Input with the function of enabling/disabling the control and alarm outputs (RUN=YES/NO).

- Closed Outputs enabled
 - Open Control and alarms output shut off

Available for I/O5 or I/O3 and I/O4 (when available).

r 5P – DIGITAL INPUT WITH REMOTE SP FUNCTION

Defines channel as Digital Input with the function of selecting the remote SP as the control setpoint.

Closed Remote SP

Open Uses main SP

Available for I/O5 or I/O3 and I/O4 (when available).

HPrG - DIGITAL INPUT WITH HOLD PROGRAM FUNCTION

Defines channel as Digital Input with the function of commanding the execution of the selected setpoint profile program.

Closed Enables execution of the program

Open Interrupts (freezes) execution of the program

Available for I/O5 or I/O3 and I/O4 (when available).

Note: Even when the execution of the program is interrupted, the control output remains active and controlling the process at the point (Setpoint) of interruption. The program will resume its normal execution starting from this same point when the digital input is closed.

Pr 1 - DIGITAL INPUT WITH FUNCTION TO EXECUTE PROGRAM 1

Defines the IO channel as Digital Input with the function of commanding the execution of the Setpoint profile **program 1**. Useful function for switching between the main Setpoint and a secondary one defined by the **program 1**.

Closed Selects program 1

Open Selects main Setpoint

Available for I/O5 or I/O3 and I/O4 (when available).

CD20 - 0-20 mA CONTROL OUTPUT

Defines the channel as a 0-20 mA control output. Available for I/O 5 only.

E.420 - 4-20 mA CONTROL OUTPUT

Defines the channel as a 4-20 mA control output.

PD20 - 0-20 mA PV RETRANSMISSION

Configures the channel to retransmit the values of PV in 0-20 mA. Available for I/O 5 only.

P420 - 4-20 mA PV RETRANSMISSION

Configures the channel to retransmit the values of PV in 4-20 mA. Available for I/O 5 only.

5.0.20 - 0-20 mA SP (SETPOINT) RETRANSMISSION

Configures the channel to retransmit the values of SP in 0-20 mA. Available for I/O 5 only.

5.4.20 - 4-20 mA SP (SETPOINT) RETRANSMISSION

Configures the channel to retransmit the values of SP in 0-20 mA. Available for I/O 5 only.

3.3 ALARM CONFIGURATION

The controller has 4 independent alarms. These alarms can be configured to operate with nine functions, as shown in the table below:

- **oFF**: Alarms turned off.
- IErr: Open Sensor alarms (Loop Break)

The open sensor alarm acts whenever the input sensor is broken or badly connected.

• **~ 5**: Program Event Alarm

Configures the alarm to act in (a) specific segment(s) of the programs of ramps and baselines to be created by the user.

• **FR** • **I**: Burnt-out Resistance Alarm (Heat Break)

Signals that the heating element has broken up. This alarm function requires the accessory Current transformer CT1.

Details for use of the option "burnt-out resistance" are found in the specific documentation that accompanies the product whenever this option is requested.

• Lo: Alarm of Absolute Minimum Value

Triggers when the value of measured PV is below the value defined for alarm Setpoint.

• H I: Alarm of Absolute Maximum Value

Triggers when the value of measured PV is above the value defined for alarm Setpoint.

• **d** IF: Alarm of Differential Value

In this function the parameters SPR I, SPR2, SPR3 and SPR4 represent the Deviation of PV in relation to the SP.

Using the Alarm 1 as example: for Positive SPA1 values, the Differential alarm triggers when the value of PV is out of the range defined for:

(SP - SPA1) to (SP + SPA1)

For a negative SPA1 value, the Differential alarm triggers when the value of PV is within the range defined above:

• d IFL: Alarm of Minimum Differential Value

It triggers when the value of PV is below the defined point by:

```
(SP – SPA1)
```

Using the Alarm 1 as example.

• **d** IFH : Alarm of Maximum Differential Value

Triggers when the value of PV is **above** the defined point by:

(SP + SPA1)

Using Alarm 1 as example.

SCREEN	ТҮРЕ	AC	ΓΙΟΝ
oFF	Inoperative	Output is not used as alarm.	
lErr	Open sensor (input Err or)	Activated when the input signal of PV is int short-circuit.	terrupted, out of the range limits or Pt100 in
r5	Event (r amp and S oak)	Activated in a specific segment of program.	
rFA IL	Resistance burnt out (resistance fail)	Signals a failure in the heating element.	
Lo	Minimum value (L o w)	SP	PV An
ні	Maximum value (Hi gh)	PV	
d IF	Differential (dif ferential)	SV-SPAn SV SV+SPAn	SV+SPAn SV SV-SPAn
		Positive SPAn	Negative SPAn
d IFL	Minimum Differential (dif ferential Low)	SV - SPAn SV	SV SV-SPAn
		Positive SPAn	Negative SPAn
d IFH	Maximum differential (dif ferential H igh)	SV SV + SPAn	SV+SPAn SV
		Positive SPAn	Negative SPAn

Table 3

Where SPAn refers to Setpoints of Alarm SPR I, SPR2, SPR3 and SPR4.

Important note: Alarms configured with the **H I**, **d IF**, and **d IFH** functions also trigger their associated output when a sensor fault is identified and signaled by the controller. A relay output, for example, configured to function as a High Alarm (**H I**), will operate when the SPAL value is exceeded and when the sensor connected to the controller input is broken.

3.3.1 ALARM TIMER MODES

The controller alarms can be configured to perform 3 timer modes:

- One pulse with defined duration
- Delayed activation
- Repetitive pulses

The illustrations in the table below show the behavior of the alarm output for various combinations of times t1 and t2. The timer functions can be configured in parameters **R** IL I, **R** IL2, **R**2L I, **R**3L I,

OPERATION	T 1	T 2	ACTION
Normal operation	0	0	Alarm Output Alarm Event
Activation for a defined time	1 to 6500 s	0	Alarm Output Alarm Event
Activation with delay	0	1 to 6500 s	Alarm Output Alarm T2 Alarm Event
Intermittent Activation	1 to 6500 s	1 to 6500 s	Alarm Output Alarm Event

Table 4

The LEDs associated to the alarms will light when the alarm condition is recognized, not following the actual state of the output, which may be temporarily OFF because of the temporization.

3.3.2 ALARM INITIAL BLOCKING

The initial blocking option inhibits the alarm from being recognized if an alarm condition is present when the controller is first energized (or after a transition from run YES \rightarrow NO). The alarm will be enabled only after the occurrence of a non-alarm condition followed by a new occurrence for the alarm.

The initial blocking is useful, for instance, when one of the alarms is configured as a minimum value alarm, causing the activation of the alarm soon upon the process start-up, an occurrence that may be undesirable.

The initial blocking is disabled for the sensor break alarm function.

3.4 EXTRACTION OF THE SQUARE ROOT

With this feature enabled the controller uses for display and control a value that corresponds to the square root of the applied input signal. Available only for the inputs belonging to the group of linear analogic signals: 0-20 mA, 4-20 mA, 0-50 mV, 0-5 V, and 0-10 V.

3.5 ANALOG RETRANSMISSION OF PV AND SP

The analog output, when not used for control purposes, is available for retransmitting the PV and SP values in 0-20 or 4-20 mA. This analog output is electrically isolated from other inputs and outputs.

The analog output signal is scalable, with the output range defined by the values programmed in the parameters **rELL** and **rEHL**.

To obtain a voltage output, the user must install a resistor shunt (550 Ω max.) to the current output terminals (terminals 7 and 8). The actual resistor value depends on the desired output voltage span.

There is no electrical isolation between serial communication (RS485) and channel I/O5.

3.6 SOFT START

The Soft Start feature avoids abrupt variations in the power delivered to the load regardless of the system power demand.

This is accomplished by defining a limiting ramp for the control output. The output is allowed to reach maximum value (100 %) only after the time programmed in the Soft Start parameter has elapsed.

The Soft Start function is used in processes that require slowly start up, where the instantaneous application of 100 % of the available power to the load may cause damages to parts of the system.

Notes:

- 1. Function only valid when in PID control mode.
- **2.** Setting 0 (zero) in the time interval, the function is disabled.

3.7 REMOTE SETPOINT

The controller can have its Setpoint value defined by an analog, remotely generated signal. This feature is enabled through the channels I/O3, I/O4 or I/O5 when configured as digital inputs and configured with the function r **SP** (Remote SP selection) or through the parameter **E**r **SP**. The remote setpoint input accepts the signals 0-20 mA, 4-20 mA, 0-5 V, and 0-10 V.

For the signals of 0-20 and 4-20 mA, a shunt resistor of 100 Ω is required between terminals 9 and 10, as shown in Figure 7.

3.8 CONTROL MODE

The controller can operate in two different manners: 1) Automatic mode or 2) Manual mode.

In automatic mode the controller defines the amount of power to be applied on the process, based on defined parameters (SP, PID, etc.). In the manual mode the user himself defines this amount of power. The parameter **LtrL** defines the control mode to be adopted.

3.9 PID AUTOMATIC MODE

For the Automatic mode, there are two different strategies of control: PID control and ON/OFF control.

PID control has its action based on a control algorithm that considers the deviation of PV with respect to SP, the rate of change of PV and the steady state error.

On the other hand, the ON/OFF control (obtained when Pb=0) operates with 0 % or 100 % of power, when PV deviates from SP.

The determination of the PID parameters (**Pb**, **r** and **dL**) is described in the item <u>PID PARAMETERS DEFINITION</u> of this manual.

3.10 LBD - LOOP BREAK DETECTION ALARM

The parameter defines a time interval, in minutes, within which the PV is expected to react to a control output signal. If the PV does not react properly within the time interval configured in **Lbd.**, the controller interprets this as a control loop break and signals this occurrence in the display.

An LBD event may be sent to any I/O channel. Simply configure the Ldb function to the desired I/O channel: the selected output will be activated when a Ldb condition is detected. When the Lbd parameter is programmed with 0 (zero), the Ldb function is disabled.

The Ldb is useful in system supervision and troubleshooting, allowing early detection of problems in the actuator, power source or load.

3.11 HBD - HEATER BREAK DETECTION

Available in the products identified with the suffix HBD. For further information, visit the link: www.novusautomation.com/en/N1200HBD_appendix

3.12 SAFE OUTPUT VALUE WITH SENSOR FAILURE

This function defines an output value (user defined) to be assigned to the control output in the event of a sensor failure.

When the input sensor is identified as broken, the controller forcing MV to assume the user configured value in the ILou parameter.

When the parameter **IE.ou** is configured with 0.0 (zero) value, this function is disabled, and the control output is simply turned off upon input sensor error.

3.13 USB INTERFACE

The USB interface is used to CONFIGURE, MONITOR or UPDATE the controller FIRMWARE. The user should use **QuickTune** software, which offers features to create, view, save and open settings from the device or files on the computer. The tool for saving and opening configurations in files allows the user to transfer settings between devices and perform backup copies.

For specific models, QuickTune allows to update the firmware (internal software) of the controller via the USB interface.

For MONITORING purposes, the user can use any supervisory software (SCADA) or laboratory software that supports the MODBUS RTU communication over a serial communication port. When connected to a computer's USB, the controller is recognized as a conventional serial port (COM x).

The user must use **QuickTune** software or consult the DEVICE MANAGER on the Windows Control Panel to identify the COM port assigned to the controller.

The user should consult the mapping of the MODBUS memory in the controller's communication manual and the documentation of the supervision software to start the MONITORING process.

Follow the procedure below to use the USB communication of the device:

- 1. Download QuickTune software from our website and install it on the computer. The USB drivers necessary for operating the communication will be installed with the software.
- Connect the USB cable between the device and the computer. The controller does not have to be connected to a power supply. The USB will
 provide enough power to operate the communication (other device functions may not operate).
- 3. Run the QuickTune software, configure the communication and start the device recognition.



The USB interface IS NOT SEPARATE from the signal input (PV) or the controller's/indicator's digital inputs and outputs. It is intended for temporary use during CONFIGURATION and MONITORING periods.

For the safety of people and equipment, it must only be used when the piece of equipment is completely disconnected from the input/output signals.

Using the USB in any other type of connection is possible but requires a careful analysis by the person responsible for installing it.

When MONITORING for prolonged periods of time and with connected inputs and outputs, we recommend using the RS485 interface, which is available or optional in most of our products.

4. INSTALLATION / CONNECTIONS

The controller must be fastened on a panel, following the sequence of steps described below:

- Prepare a panel cut-out according to Specifications.
- Remove the mounting clamps from the controller.
- Insert the controller into the panel cut-out.
- Slide the mounting clamp from the rear to a firm grip at the panel.

4.1 INSTALLATION RECOMMENDATIONS

- All electrical connections are made to the screw terminals at the rear of the controller. They accept wire sizes from 0.5 to 1.5 mm² (16 to 22 AWG). The terminals should be tightened to a torque of 0.4 Nm (3.5 lb in)
- To minimize the pick-up of electrical noise, the low voltage DC connections and the sensor input wiring should be routed away from highcurrent power conductors. If this is impractical, use shielded cables. In general, keep cable lengths to a minimum.
- All electronic instruments must be powered by a clean mains supply, proper for instrumentation.
- It is strongly recommended to apply RC'S FILTERS (noise suppressor) to contactor coils, solenoids, etc.
- In any application it is essential to consider what can happen when any part of the system fails. The controller features by themselves cannot
 assure total protection.

4.2 ELECTRICAL CONNECTIONS

The controller's internal circuits can be removed without undoing the connections on the back panel. The figure below shows the disposition of the features placed on the back panel of the controller:



4.2.1 POWER SUPPLY CONNECTIONS



4.2.2 INPUT CONNECTIONS

THERMOCOUPLE (T/C) AND 0-50 mV



RTD (Pt100)



The figure shows the Pt100 wiring, for 3 conductors. For proper cable length compensation, use conductors of same gauge and length. For 4-wires Pt100, leave one conductor disconnected at the controller. For 2-wire Pt100, short-circuit terminals 11

and 12.

4-20 mA



5 V AND 10 V



4.2.3 REMOTE SETPOINT

7 8 100R F 9 100 V V 10 - - V 11 - - V 12 12 V V	Feature available in terminals 9 and 10. When the Remote SP input signal is 0-20 mA or 4-20 mA, an external 100 Ω shunt resistor of must be connected to terminals 9 and 10 as indicated in this figure.
------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

4.2.4 DIGITAL INPUT CONNECTIONS

To trigger I/O3, I/O4, and I/O5 channels as Digital Inputs, connect a key or similar (Dry Contact) to the terminals.



4.2.5 ALARMS AND OUTPUTS CONNECTIONS

When configured as outputs, the I/O channels must have their load limit capacities observed, according to the Specifications.



5. OPERATION

The front panel can be seen in the figure below:



Figure 2

Display of PV / Programming: Displays the current value of PV (Process Variable). When in configuration mode, it shows the parameters names. **Display of SP / Parameters:** Displays the value of SP (Setpoint). When in configuration mode, it shows the parameters values.

COM indicator: Flashes to indicate communication activity in the RS485 interface.

TUNE indicator: Stays ON while the controller is in tuning process.

MAN indicator: Signals that the controller is in the manual control mode.

RUN indicator: Indicates that the controller is active, with the control output and alarms enabled.

OUT indicator: For relay or pulse control output; it reflects the actual state of the output. If an analog output is assigned for control, the indicator lights continuously.

A1, A2, A3, and A4 indicators: signalize the occurrence of alarm situation.

P Key (Program key): Key used to walk through the menu parameters.

Back Key: Key used to retrocede parameters.

▲ Increment key and ▼ Decrement key: Keys used to alter the values of the parameters.

When the controller is powered on, its firmware version is presented for 3 seconds, after which the controller starts normal operation. The values of PV and SP are displayed, and the outputs are enabled.

To operate appropriately, the controller needs a configuration that is the definition of each one of the several parameters presented by the controller. The user must be aware of the importance of each parameter and for each one determines a valid condition or a valid value.

Note:
The Input Type must be the first parameter to be configured.

The parameters are grouped in levels according to their functionality and operation easiness. The 7 levels of parameters are:

LEVEL	ACCESS	
1 - Operation	Free access	
2 – Tuning		
3 – R&S Programs		
4 – Alarms		
5 – Scale	Reserved access	
6 – I/O		
7 – Calibration		

Table 5

The parameters in the operation level have easy access through the key P. The access deeper levels use the combination of keys:

◀ (BACK) and ℙ (PROG) pressed simultaneously

Press 🖻 to advance or 🔳 to retrocede parameters within a level. At the end of each level, the controller returns to the operation level. Keep pressing the 🖻 key to move fast forward in the level.

Alternatively, the controller returns to the operation level after pressing the 🔳 key for 3 seconds

All configuration parameters are stored in protected memory. The values are saved when the keys **P** or **I** are pressed after changing a parameter value. The value of SP is saved upon pressing the **P** key or every 25 seconds.

Note: It is recommended to disable/suspend the control (run = no) whenever it is necessary to change the device settings.

6. DESCRIPTION OF THE PARAMETERS

6.1 OPERATION CYCLE

PV Indication (Red Screen) SP Indication (Green Screen)	PV and SP indication. The upper display shows the current value of PV. The lower display shows the control SP value.		
[trl	Control Mode:		
Control	Means automatic control mode.		
	TRn Means manual control mode.		
	Bumpless transfer between automatic and manual control modes.		
PV Indication	Manipulated Variable value (MV).		
(Red Screen)	The upper display shows PV value. The lower display shows the percentage of MV applied to the control output.		
(Green Screen)	When in manual control, the MV value can be manually changed by the 🗈 and 🗟 keys. When in auto mode the MV value can		
	only be viewed.		
	To distinguish the MV display from the SP display, the MV is shown flashing intermittently.		
EPr	Program execution.		
Enable Program	Selects the ramp and soak profile program to be executed.		
	0 Does not execute program		
	1 to 20 Number of the program to be executed		
	With enabled outputs (run = YES), the program starts right after the program is selected.		
P.SEG	Screen for indication only. When a ramp and soak program is active, this parameter shows the number of the segment under execution, from 1 to 9.		
E.SEG	Screen for indication only. When a ramp and soak program is in execution, it shows the remaining time to the end of the current segment, in units of time configured in the Prtb parameter.		
run	Enables control outputs and alarms.		
Run	YE5 Outputs enabled.		
	na Outputs not enabled.		

6.2 TUNING CYCLE

REun	Defines the	control strategy to be taken:	
Auto-tune	٥FF	Turned off.	
	FRSŁ	Fast automatic tuning.	
	FULL	More accurate automatic tuning.	
	SELF	Precise + auto-adaptive tuning	
	r ALF	Forces one new precise automatic precise + auto-adaptive tuning.	
	Fahf	Forces one new precise automatic + auto-adaptive tuning when run = YES or the controller is turned on.	
РЬ	Proportiona	l band.	
Proportional Band	Value of the	term P of the control mode PID, in percentage of the maximum span of the input type.	
	Adjust of be	tween 0 and 500.0 %.	
	When set v	vith 0.0, determines ON/OFF control mode.	
lr	Integral rate	ι.	
Integral Rate	Value of the	term I of the PID algorithm, in repetitions per minute (Reset).	
	Adjustable between 0 and 99.99.		
	Displayed o	nly if proportional band \neq 0.	
dŁ	Derivative ti	me.	
Derivative Time	Value of the	term D of the control mode PID, in seconds.	
	Adjustable I	petween 0 and 300.0 seconds.	
	Displayed o	nly if proportional band $\neq 0$.	
Ľ٤	Pulse Width	Modulation (PWM). Period in seconds.	
Cycle Time	Adjustable I	petween 0.5 and 100.0 seconds.	
	Displayed o	nly if proportional band \neq 0.	
HYSE	Control hys	teresis. Hysteresis value for ON/OFF control.	
Hysteresis	Adjustable I	petween 0 and the measurement input type span.	

Rct	Control action:
Action	rE Control with reverse Action. Appropriate for heating . Turns control output on when PV is below SP.
	<i>d</i> Ir Control with direct Action. Appropriate for cooling . Turns control output on when PV is above SP.
LbdE	Time interval for the LBD function. Defines the maximum interval of time for the PV to react to a control command. In minutes
Loop break detection time	
ьIRS	Bias function. Allows adding a percentage value between -100 % and +100 % to the MV control output
Bias	The value 0 (zero) disables the function.
ouLL Output Low Limit	Lower limit for the control output. Minimum percentage value assumed by the control output when in automatic mode and in PID.
	Typically configured with 0 %.
ouHL	Upper limit for the control output. Maximum percentage for the control output when in automatic mode and in PID.
Output High Limit	Typically configured with 100 % .
SFSE	Soft Start function. Time in seconds during which the controller limits the MV value progressively from 0 to 100 %.
Soft Start	It is enabled at power up or when the control output is activated. If in doubt set zero (zero value disables the Soft start function).
SP,R I	Alarm Setpoint. Value that defines the point of activation for the programmed alarms with the functions Lo or H I.
SPR2	For the alarms configured with Differential type functions, this parameter defines deviation (band).
SP,R3	Not used for the other alarm functions.
SP,A4	
Alarm Setpoint	

6.3 PROGRAMS CYCLE

Pr <u>t</u> b	Defines the time base that will be used by all Ramp & Soak programs.
Program time base	SEC Time basis in seconds.
	Time basis in minutes.
Pr n Program number	Selects the ramp and soak profile program to be edited/viewed. The sequence of parameters that follows refer to this selected program. Total of 20 programs possible.
PLoL Program Tolerance	Maximum admitted deviation of PV with respect to SP. If exceeded, the program execution is suspended (the internal timer freezes) until the deviation be returns within the defined tolerance. The value 0 (zero) disables the function.
PSP0	Program SP. 0 to 9.
PSP9	Group of 10 values of SP that define the Ramp and Soak profile segments.
Program SP	
PE I	Segment duration. 1 to 9.
PE9	Defines the time of duration, in second or minutes, of the segments of the program being edited.
Program Time	
PE I	Event alarm. 1 to 9.
PE9	Parameters that define which alarms are to be activated during the execution of a certain program segment.
Program event	The alarms chosen must have its function configured as ~ 5 .
LP	Link programs.
Link Program	Number of the next profile program to be linked following the current program.
	0 Do not link to any other program.

6.4 ALARM CYCLE

FuRI FuR2 FuR3 FuR4 Function Alarm	Alarm functions. Defines the functions for the alarms: oFF, IErr, r5, rFR IL, Lo, H I, d IFL, d IFH, d IF
LAI LAZ LAZ LAZ Blocking Alarm	 Alarm initial blocking. Function used to initially block alarms 1 to 4. YES Enables initial blocking. no Inhibits initial blocking.
HYR I HYR2 HYR3 HYR4 Alarm Hysteresis	Alarm hysteresis. Defines the difference between the value of PV at which the alarm is triggered and the value at which it is turned off (in engineering units).
R IE I R2E I R3E I R4E I Alarm Time t1	Defines the temporization time t1 , in seconds, for the alarms. Defines the temporization time t1 , in seconds, for the alarms time functions. The value 0 (zero) disables the function.
R 12 R222 R322 R422 R422 Alarm Time 12	Alarm Time t2 . Defines the temporization time t2 , in seconds, for the alarms time functions. The value 0 (zero) disables the function.
FL5h _{Flash}	Allows visual signalization of an alarm occurrence by flashing the indication of PV in the operation level. To enable, the user chooses which alarms are to be associated with this feature: 1, 2, 3, 4.

6.5 SCALE CYCLE

L YPE Type	Input type. Selects the input signal type to be connected to the process variable input. Refer to Table 1 . The first parameter to be configured.				
FLEr Filter	Digital Input Filter. Used to improve the stability of the measured signal (PV). Adjustable between 0 and 20. In 0 (zero) it means filter turned off and 20 means maximum filter. The higher the filter value, the slower is the response of the measured value.				
dPPo Decimal Point	Decimal point. Allows you to define the display of the decimal point. When configuring the input (L JPE) with temperature sensors (J, K, Pt100, etc), in addition to the integer part of the measurement, the dPPo parameter will only display decimal values (XXX.X). When configuring the input (LJPE) with linear signals (mA, mV, V), the dPPo parameter determines the position of the decimal point of the measured value (XXXX, XXXX, XXXX).				
un I E _{Unit}	Allows you to define the temperature unit to be used: Celsius ° C or Fahrenheit ° F When using a temperature sensor, this parameter will be shown.				
root Square Root	Square Root Function. Applies the quadratic function on the input signal, within the limits programmed in SPLL and SPHL . YES Enables the function. Does not enable the function .				
	The indication assumes the lower limit value when the input signal is below 1 % of programmed span. Parameter available for lineal inputs only.				
OFF5 Offset	Offset value to be added to the PV reading to compensate sensor error. Default value: zero.				
E.r. 5P Enable Remote SP	Allows you to Enable remote SP. YES Enables the function.				
	This parameter is not displayed when the remote SP selection is defined by a Digital Input.				

r SP	Defines the signal type for the remote SP.					
Remote SP type	D-2D Current of 0-20 mA.					
	4-20 Current of 4-20 mA.					
	D-5 Voltage of 0-5 V.					
	D- ID Voltage of 0-10 V.					
	Parameter displayed when remote SP is enabled.					
r 5LL Remote SP Low Limit	Remote setpoint low limit. Used in conjunction with the ~ 5HL , scales the remote SP input defining the initial value in the remote SP indication range.					
- 5 111	Parate Catroint Lligh Limit defines the full cools indication of the Domete Catroint					
Remote SP Hiah Limit	Parameter displayed when remote SP is enabled					
581	Defines the SP lower limit of SP.					
Setpoint Low Limit	For the linear analog input types available (0-20 mA, 4-20 mA, 0-50 mV, 0-5 V and 0-10 V), defines the minimum PV indication range, besides limiting the SP adjustment.					
SPHL	Defines the upper limit for adjustment of SP.					
Setpoint High Limit	For the linear analog input types available (0-20 mA, 4-20 mA, 0-50 mV, 0-5 V and 0-10 V), defines the maximum PV indication range, besides limiting the SP adjustment.					
FELL Retransmission Low Limit	In association with the rEHL parameter, it defines the analog retransmission scale for PV or SP. The rELL represents the.					
	This parameter is displayed only if the analog retransmission is selected in the I/O 5 parameter (I/O level).					
rEHL	Defines the full-scale value for the analog retransmission of PV or SP.					
Retransmission High Limit	This parameter is displayed only when the analog retransmission is selected in the I/O 5 parameter (I/O level).					
lEou	Percentage output value that will be transfer to MV when the SAFE output function is enabled. If IEou = 0, the SAFE output function is disabled, and the outputs are turned off in the occurrence of a sensor fail.					
ЬЯлд	Digital communication Baud Rate selection. In kbps.					
Baud Rate	1.2, 2.4, 4.8, 9.6, 19.2, 38.4, 57.6, and 115.2					
Prty	Parity of the serial communication.					
Parity	nonE Without parity.					
	ELET Even parity.					
	Ddd Odd parity.					
Rddr	Slave address selection.					
Address	Identifies the controller in the network. The possible address numbers are from 1 to 247.					

6.6 I/O (INPUTS AND OUTPUTS) CYCLE

0	1	I/O1 channel function. Selection of the function used in the channel I/O1.
10	2	I/O2 channel function. Selection of the function used in the channel I/O2.
10	3	I/O3 channel function. Selection of the function used in the channel I/O3.
10	ч	I/O4 channel function. Selection of the function used in the channel I/O4.
10	5	I/O5 channel function. Selection of the function used in the channel I/O5.

6.7 CALIBRATION CYCLE

All the input and output types are calibrated in the factory. If a recalibration is required, this should be conducted by experienced personnel.

If this cycle is accidentally accessed, pass through all the parameters without pressing the $\overline{\mathbf{v}}$ or \mathbf{A} keys.

PRSS	Input of the Access Password.			
Password	This parameter is presented before the protected cycles.			
	See <u>CONFIGURATION PROTECTION</u> section.			
InLE	Enter the value corresponding to the low scale signal applied to the analog input.			
Input Low Calibration	See INPUT CALIBRATION section.			
InH[Enter the value corresponding to the full-scale signal applied to the analog input.			
Input High Calibration	See INPUT CALIBRATION section.			

r SLC Remote SP Low Calibration	Enter the value corresponding to the low scale signal applied to the remote SP input. See <u>INPUT CALIBRATION</u> section.
r SHC Remote SP High Calibration	Enter the value corresponding to the full-scale signal applied to the remote SP input. See <u>INPUT CALIBRATION</u> section.
DuLC Output Low Calibration	Enter the analog low value as measured at the analog output. See <u>ANALOG OUTPUT CALIBRATION</u> section.
DuHC Output High Calibration	Enter the analog high value as measured at the analog output. See <u>ANALOG OUTPUT CALIBRATION</u> section.
r SEr Restore	Restores the factory calibration for all inputs and outputs, disregarding modifications conducted by the user.
L J Cold Junction	Adjusts the of cold junction temperature value.
HL YP Hardware Type	Parameter that informs the controller about the hardware optional installed. It should not be altered by the user, except when an accessory is introduced or removed.
	0 Basic model. Without optional items
	1 485
	2 3R
	3 3R + 485
	4 DIO
	5 DIO + 485
	8 HBD
	9 HBD + 485
	Note: The options 6 and 7 not are used.
PR<u>5</u> Password	Allows defining a new access password, always different from zero.
Prot Protection	Sets up the Level of Protection. See Table 8.
Frequency	Mains frequency. This parameter is important for proper noise filtering.

6.8 ALL PARAMETERS

OPERATION CYCLE	TUNING CYCLE	PROGRAM CYCLE	ALARM CYCLE	CONFIGURATION CYCLE	I/O CYCLE	CALIBRATION CYCLE
PV and SP	Rtun	Prith	FuR (- FuR4	FRE	lo I	PRSS
EtrL	РЪ	Prn	LLA I - PLAA	FLEr	102	InLE
PV and MV	Ir	PtoL	HYR I - HYRY	dPPo	lo3	InHE
EPr	dŁ	P5P0 – P5P9	A IL I	un IL	104	r SLC
P.SEG	۲Ł	PE 1-PE9	A 1F5	root	<i>lo</i> 5	r SHE
Ł.SEG	HYSE	PE 1-PE9	ASF 1	oFFS		DuLC
run	ACF	LP	85F5	E.r SP		DuHC
	LbdE		FLSh	r SP		r Str
	ь IRS			r SLL		[]
	oull			r SHL		HEYP
	ouHL			SPLL		PR <u>5</u> C
	SFSE			SPHL		Prot
	SPA I - SPA4			lEou		FrEq
				rELL		
				rEHL		
				bRud		
				Prty		
				Rddr		

7. CONFIGURATION PROTECTION

The controller provides means for protecting the parameters configurations, not allowing modifications to the parameter values, avoiding tampering or improper manipulation.

The parameter **Protection** (**Prot**), in the Calibration level, determines the protection strategy, limiting the access to certain levels, as shown by the table below.

PROTECTION LEVEL	PROTECTED CYCLES
1	Only the Calibration level is protected.
2	I/O and Calibration levels.
3	Tuning, I/O, and Calibration levels.
4	Alarm, Tuning, I/O, and Calibration levels.
5	Programs, Alarm, Tuning, I/O, and Calibration levels.
6	Tuning, Programs, Alarm, Input, I/O, and Calibration levels.
7	Operation (except SP), Tuning, Programs, Alarm, input, I/O, and Calibration levels.
8	Operation, Tuning, Programs, Alarm, Input, I/O, and Calibration levels.

Table 7

7.1 ACCESS PASSWORD

The protected levels, when accessed, request the user to provide the **Access Password** for granting permission to change the configuration of the parameters on these cycles.

The prompt **PR55** precedes the parameters on the protected levels. If no password is entered, the parameters of the protected cycles can only be visualized.

The Access Code is defined by the user in the parameter **Password Change** (**PR5L**), present in the Calibration level. The factory default for the password code is 1111.

7.2 PROTECTION OF THE ACCESS CODE

The protection system built into the controller blocks for 10 minutes the access to protected parameters after 5 consecutive frustrated attempts of guessing the correct password.

7.3 MASTER PASSWORD

The Master Password is intended for allowing the user to define a new password in the event of it being forgotten. The Master Password does not grant access to all parameters, only to the Password Change parameter (**PRSL**). After defining the new password, the protected parameters may be accessed (and modified) using this new password.

The master password is made up by the last three digits of the serial number of the controller added to the number 9000.

As an example, for the equipment with serial number 07154321, the master password is 9 3 2 1.

8. RAMPS AND SOAKS PROGRAMS

This feature allows the creation of Ramp and Soak Setpoint Profiles (Programs). Up to **20 different profiles** with **9 segments** each can be programmed. Longer profiles of up to 180 segments can be created by linking 2 or more profiles together.

The figure below displays a profile model:



Once a profile is defined and selected for execution (parameter *EPr* in the operating level), the controller starts to generate the SP profile automatically in accordance with the elaborated program.

To execute a profile with fewer segments just program 0 (zero) for the time intervals that follow the last segment to be executed.



The program tolerance defines the maximum deviation between PV and SP for the execution of the profile. If this deviation is exceeded, the program will be halted until the deviation falls to within the tolerance band.

Programming 0 (zero) in the **PLoL** parameter disables the program tolerance and the profile execution will continue regardless of the PV value (time priority as opposed to SP priority).

The configured time limit for each segment is 9999 and can be displayed in seconds or minutes, depending on the time base configured.

8.1 LINK OF PROGRAMS

It is possible to create a more complex program, with up to 180 segments, joining the 20 programs. This way, at the end of a program execution the controller immediately starts to run the next one, as indicated in the **LP**.

To force the controller to run a given program or many programs continuously, it is only necessary to link a program to itself or the last program to the first.



8.2 EVENT ALARM

The Event Alarm function associates the alarms to specific segments of a program. The information of which alarms are to be activated or deactivated is given in parameters **PE I** to **PE9**. Press the **a** and **r** keys until the desired alarm numbers are displayed.

The Event Alarm requires that the Alarm function be configured as rS .

Notes:

- 1. If **PtoL** is different than zero, the controller will wait for the PV to reach the first program set point **5PD** to start the program execution. Otherwise, it will start promptly.
- 2. Should any power failure occur, the controller resumes the program execution at the beginning of the segment that was interrupted.

9. PID PARAMETERS DEFINITION

The determination (or tuning) of the PID control parameters in the controller can be conducted in an automatic way and auto-adaptive mode. The **Automatic Tuning** is always initiated under request of the operator, while the **Auto-Adaptive Tuning** is initiated by the controller itself whenever the control performance becomes poor.

9.1 AUTOMATIC TUNING

In the beginning of the Automatic Tuning the controller has the same behavior of an ON/OFF controller, applying minimum and maximum performance to the process. Along the tuning process the controller's performance is refined until its conclusion, already under optimized PID control.

It begins immediately after the selection of the options FAST, FULL, RSLF or TGHT, defined by the operator in the parameter ATUN.

9.2 AUTO-ADAPTIVE TUNING

Is initiated by the controller whenever the control performance is worse than the one found after the previous tuning.

To activate the performance supervision and Auto-Adaptive Tuning, the parameter ATUN must be adjusted for SELF, RSLF or TGHT.

The controller's behavior during the **Auto-Adaptive Tuning** will depend on the worsening of the present performance. If the maladjustment is small, the tuning is almost imperceptible for the user. If the maladjustment is big, the **Auto-Adaptive Tuning** is like the method of **Automatic Tuning**, applying minimum and maximum performance to the process in ON/OFF control.



The operator may select, through the ATUN parameter, the desired tuning type among the following options:

- OFF: The controller does not carry through Automatic Tuning or Auto-Adaptive Tuning. The PID parameters will not be automatically determined nor optimized by the controller.
- FAST: The controller will accomplish the process of Automatic Tuning one single time, returning to the OFF mode after finishing. The tuning in this mode is completed in less time, but not as precise as in the FULL mode.
- FULL: The same as the FAST mode, but the tuning is more precise and slower, resulting in better performance of the P.I.D. control.
- SELF: The performance of the process is monitored, and the Auto-Adaptive Tuning is automatically initiated by the controller whenever the performance becomes poorer.

After a tuning cycle, the controller starts collecting data from the process for determining the performance benchmark that will allow evaluate the need for future tunings. This phase is proportional to the process response time and is signaled by the flashing TUNE indication on the display. It is recommended not to turn the controller off neither change the SP during this learning period.

- rSLF: Accomplishes the Automatic Tuning and returns into the SELF mode. Typically used to force an immediate Automatic Tuning of a controller that was operating in the SELF mode, returning to this mode at the end.
- TGHT: Like the SELF mode, but in addition to the Auto-Adaptive Tuning it also executes the Automatic Tuning whenever the controller is set in RUN=YES or when the controller is turned on.

Whenever the parameter ATUN is altered by the operator into a value different from OFF, an automatic tuning is immediately initiated by the controller (if the controller is not in RUN=YES, the tuning will begin when it passes into this condition). The accomplishment of this automatic tuning is essential for the correct operation of the auto-adaptative tuning.

The methods of **Automatic Tuning** and **Auto-Adaptative Tuning** are appropriate for most of the industrial processes. However, there may be processes or even specific situations where the methods are not capable to determine the controller's parameters in a satisfactory way, resulting in undesired oscillations or even taking the process to extreme conditions. The oscillations themselves imposed by the tuning methods may be intolerable for certain processes. These possible undesirable effects must be considered before beginning the controller's use, and preventive

measures must be adopted to assure the integrity of the process and users.

The **TUNE** signaling device will stay on during the tuning process.

In the case of PWM or pulse output, the quality of tuning will also depend on the cycle time adjusted previously by the user.

If the tuning does not result in a satisfactory control, refer to the table below for guidelines on how to correct the behavior of the process:

PARAMETER	VERIFIED PROBLEM	SOLUTION
Droportional band	Slow answer	Decrease
Proportional band	Great oscillation	Increase
Integration rate	Slow answer	Increase
integration rate	Great oscillation	Decrease
Dorivativa tima	Slow answer or instability	Decrease
Denvauve ume	Great oscillation	Increase

10. MAINTENANCE

10.1 PROBLEMS WITH THE CONTROLLER

Connection errors and inadequate programming are the most common errors found during the controller operation. A final revision may avoid loss of time and damages.

The controller displays some messages to help the user identify problems.

MESSAGE	PROBLEM DESCRIPTION
0000	Open input. No sensor or signal.
Err 1 Errb	Connection and/or configuration errors. Check the wiring and the configuration.

Table 9

Other error messages may indicate hardware problems requiring maintenance service. When contacting the manufacturer, inform the instrument serial number, obtained by pressing the key 🗐 for more than 3 seconds.

10.2 INPUT CALIBRATION

All inputs are factory calibrated and recalibration should only be done by qualified personnel. If you are not familiar with these procedures do not attempt to calibrate this instrument.

The calibration steps are:

- a. Configure the type of input to be calibrated.
- b. Configure the lower and upper limits of indication for the maximum span of the selected input type.
- c. At the input terminals inject a signal corresponding to a known indication value a little above the lower display limit.
- d. Access the parameter InLc. With the keys 🛋 and 🔍 adjust the display reading such as to match the applied signal. Then press the P key.
- e. Inject a signal that corresponds to a value a little lower than the upper limit of indication.
- f. Access the parameter InLc. With the keys 🛋 and 🔍 adjust the display reading such as to match the applied signal. Then press the P key.

Note: When checking the controller calibration with a Pt100 simulator, pay attention to the simulator minimum excitation current requirement, which may not be compatible with the 0.170 mA excitation current provided by the controller.

10.3 ANALOG OUTPUT CALIBRATION

- 1) Configure I/O 5 for the current output to be calibrated, be it control or retransmission.
- 2) In the screen ctrL, program manual mode (iRn).
- 3) Connect a current meter to the analog output.
- 4) Enter the calibration cycle with the correct password.
- 5) Select the screen auLc. Press the keys 🛦 and 🗑 for the controller to recognize the calibration process of the current output.
- 6) Read the current indicated on the current meter and adjust the parameter oul c to indicate this current value (use the keys 🛓 and 💌)
- 7) Select the screen outer. Press the keys 🛓 and 🗑 for the controller to recognize the calibration process of the current output.
- 8) Read the current indicated on the current meter and adjust the parameter out to indicate this current value
- 9) Press the key P to confirm the calibration procedure and return to the operating level.

11. SERIAL COMMUNICATION

The controller can be supplied with an asynchronous RS-485 digital communication interface for master-slave connection to a host computer (master).

The controller works as a slave only and all commands are started by the computer which sends a request to the slave address. The addressed unit sends back the requested reply.

Broadcast commands (addressed to all indicator units in a multidrop network) are accepted but no reply is sent back in this case.

11.1 FEATURES

- Signals compatible with RS-485 standard. MODBUS (RTU) Protocol. Two wire connection between 1 master and up to 31 (addressing up to 247 possible) instruments in bus topology. The communication signals are electrically insulated from the rest of the device.
- Maximum connection distance: 1000 meters.
- Time of disconnection for the controller: Maximum 2 ms after last byte.
- Selectable speed; 8 data bits; 1 Stop Bit; selectable parity (no parity, pair, or odd).
- Time at the beginning of response transmission: maximum 100 ms after receiving the command.
- There is no electrical isolation between serial communication (RS485) and channel I/O5.

The RS485 signals are:

D1	D	D+	В	Bidirectional data line.	Terminal 16
D0	D	D-	Α	Inverted bidirectional data line.	Terminal 17
C				Optional connection that improves communication performance.	Terminal 18
GND					

Table 10

11.2 CONFIGURATION OF PARAMETERS FOR SERIAL COMMUNICATION

To use the serial, you must set the following parameters:

- **bRud**: Communication speed.
- Prty: Communication parity.

Rddr: Communication address for the controller.

11.3 COMMUNICATION PROTOCOL

The Modbus RTU slave is implemented. All configurable parameters can be accessed for reading or writing through the communication port. Broadcast commands are supported as well (address 0).

The available Modbus commands are:

03	Read Holding Register
05	Force Single Coil
06	Preset Single Register
16	Preset Multiple Register

11.4 HOLDING REGISTERS TABLE

Follows a description of the usual communication registers.

For full documentation, see ATTACHMENT 1.

All registers are 16-bit signed integers.

ADDRESS	PARAMETER	REGISTER DESCRIPTION
0000	Active SP	Read: Active control SP (main SP, from ramp and soak or from remote SP).
		Write: To main SP.
		Range: From 5PLL to 5PHL .
0001	PV	Read: Process variable.
		Write: Not allowed.
		Range: Minimum value is the one configured in SPLL and the maximum value is the one configured in SPHL . Decimal point position depends on dPPo value.
		In case of temperature reading, the value read is always multiplied by 10, independently of dPPo value.

ADDRESS	PARAMETER	REGISTER DESCRIPTION
0002	MV	Read: Output Power in automatic or manual mode. Write: Not allowed. See address 28. Range: 0 to 1000 (0.0 to 100.0 %).

12. CONFIGURATION EXAMPLES

On NOVUS product page, you can download a file with configuration examples for N1200: www.novusautomation.com/en/examples N1200.

13. SPECIFICATIONS

DIMENSIONS	
Panel cutout:	
Approximate weight:	
POWER SUPPLY	
Optionally 24V:	
Maximum consumption:	
ENVIRONMENTAL CONDITIONS:	
Operation temperature:	
Relative humidity:	
For temperatures above 30 °C, reduce 3 % for each °C.	
Internal Use; Category of installation II, Degree of pollution 2; altitude < 20	00 m.
INPUT	T/C, Pt100, voltage and current (according to Table 1)
Internal resolution:	
Display resolution:	
Rate of input reading:	up to 55 per second
Accuracy:	Thermocouples J, K, T, E: 0.25 % of the span $\pm 1~^\circ\text{C}$
	Thermocouples N, R, S, B: 0.25 % of the span $\pm 3\ ^\circ\text{C}$
	Pt100: 0.2 % of the span
Input Impedance:	0-50 mV, Pt100, Thermocouples: >10 M Ω
	0-5 V: >1 MΩ
Measurement of Pt100:3-wire type, (α =0.0038	35) with compensation for cable length, excitation current of 0.170 mA
All input and output types are factory calibrated. Thermocouples according) to standard NBR 12771 / 99, RTD's NBR 13773 / 97.
ANALOGICAL OUTPUT (I/O5):	0-20 mA or 4-20 mA, 550 Ω max.
31000 levels, insulated, for control or retransmission of PV and SP.	
CONTROL OUTPUT:	2 Relays SPST-NO (I/O1 and I/O2): 1.5 A / 240 Vac, typical use
	1 Relay SPDT (I/O3): 3 A / 250 Vac, typical use
	Voltage pulse for SSR (I/O5): 10 V max. / 20 mA
	Voltage pulse for SSR (I/O3 and I/O4): 5 V max. / 20 mA
ELECTROMAGNETIC COMPATIBILITY:	EN 61326-1:1997 and EN 61326-1 / A1:1998
SAFETY:	EN61010-1:1993 and EN61010-1 / A2:1995
USB INTERFACE 2.0, CDC CLASS (VIRTUAL COMMUNICATIONS PORT),	MODBUS RTU PROTOCOL.
SPECIFIC CONNECTIONS FOR TYPE FORK TERMINALS OF 6.3 mm.	
FRONT PANEL:	IP65, polycarbonate - UL94 V-2
HOUSING:	IP20, ABS+PC UL94 V-0
START-UP OPERATION:	
CERTIFICATIONS: CE, UKCA, UL (FILE: 300526)	

14. **IDENTIFICATION**

N1200 -	3R -	485 -	24V
Α	В	С	D

A: Controller Model:

N1200

B: Optional I/O:

- Blank (basic version, without I/O3 nor I/O4)
 - 3R (SPDT Relay in I/O3)
 - DIO (Digital I/Os in I/O3 and I/O4)
- HBD (Burnt-Out Resistance detection)

C: Digital Communication:

- $\label{eq:basic version, without serial communication);} Blank \qquad (basic version, without serial communication);$
 - 485 (RS485, Modbus protocol)
- D: Power Supply:
 - Blank (basic version, 100 to 240 Vac/dc input)
 - 24V (12 to 24 Vdc / 24 Vac input voltage)

15. WARRANTY

Warranty conditions are available on our website www.novusautomation.com/warranty.

16. ATTACHMENT 1 – COMMUNICATION PROTOCOL

16.1 COMMUNICATION INTERFACE

The optional RS485 serial interface allows you to address up to 247 networked controllers, communicating remotely with a computer or master controller.

16.2 RS485 INTERFACE

- Compatible line signals with RS485 standard.
- 3-wire connection between master and up to 31 slaves controllers in a bus topology. With converters with multiples outputs, it is possible to
 address up to 247 nodes.
- Maximum communication distance: 1000 meters.
- The RS485 signals are:

D1	D	D+	В	Bidirectional data line.	Terminal 16
D0	D	D-	Α	Inverted bidirectional data line.	Terminal 17
С			Ontional connection that improves communication performance	Terminal 18	
GND			optional connection that improves communication performance.	reminario	

Table 12

16.3 GENERAL FEATURES

- Serial interface optical isolation.
- Programmable Baud Rate: 1200, 2400, 4800, 9600, 19200, 38400, 57600 or 115200 bps.
- Data Bits: 8
- Parity: None, Even or Odd.
- Stop Bits: 1

16.4 COMMUNICATION PROTOCOL

The device supports slave MODBUS RTU protocol, available in most supervisory software found in the market.

Using the Register Tables, you can access (read and/or write) the controller configurable parameters. By using address **0**, it is possible to write to the registers in Broadcast mode.

The available Modbus commands are the following:

03	Read Holding Register
05	Force Single Coil
06	Preset Single Register
16	Preset Multiple Register

The registers are presented in a table, so that it is possible to read several registers with one request.

16.4.1 SETTING THE COMMUNICATION PARAMETERS

To use the serial, you must set 3 parameters:

bRud: Communication baud rate. All devices have the same baud rate.

Rddr: Controller communication address. Each controller must have a unique address.

Prty: Parity.

16.4.2 REGISTER TABLE

Same as the Holding Registers (reference 4X). The registers are the internal parameters of the controller. Most of the registers up to address 12 are read-only. Check each case.

Each parameter in the table is a 16-bit word with sign represented as a 2 complement.

HOLDING REGISTERS	PARAMETER	REGISTER DESCRIPTION
0000	Active SP	Read: Active control Setpoint (from main screen, Ramps and Soaks, or remote Setpoint). Write: Control Setpoint on the main screen. Maximum range: From SPLL to the value set in SPHL .
0001	PV	Read: Process variable. Write: Not allowed. Maximum range: The minimum value is the value set in 5PLL . The maximum value is the value set in 5PHL . The position of the decimal point depends on the dPPo screen. When reading the temperature, the value will always be multiplied by 10, regardless of the dPPo value.
0002	MV	Read: Power output enabled (manual or automatic). Write: When in manual mode, it allows you to write the MV. When in automatic mode, this register is Read Only. Range: 0 to 1000 (0.0 to 100.0 %).
0003	Remote SP	Read/Write: Input type selected for the remote SP. Range: 0 – 3
0004	Screen value	Read: Value on the current screen. Write: Value on the current screen. Maximum range: -1999 to 9999. The range depends on the screen shown.
0005	Screen number	Read: Number of the current screen. Write: Not allowed. Range: 0000 h a 060 Ch. Screen number formation: XXYYh, where: $XX \rightarrow$ Number of the screen cycle $YY \rightarrow$ Screen number
0006	Status Word 1	Read: Controller status Bits. Write: Not allowed. Read value: See <u>STATUS WORDS</u> section.
0007	Software Version	Read: Controller software version. Write: Not allowed. Read values: If the equipment version is V1.00, for example, the read value will be 100.
0008	ID	Read: Device identification number. Write: Not allowed. Read value: 48 (30 h) for N1200 . Read value: 18 (12 h) for N1200-HC .
0009	Status Word 2	Read: Controller status Bits. Write: Not allowed. Read value: See <u>STATUS WORDS</u> section.
0010	Status Word 3	Read: Controller status Bits. Write: Not allowed. Read value: See <u>STATUS WORDS</u> section.
0011	lr	Integral rate (in repetitions/min). Range: 0 to 9999 (0.00 to 99.99).
0012	dt	Derivative time (in seconds). Range: 0 to 3000 (0.0 to 300.0).
0013	Рь	Proportional band (in percent). Range: 0 to 5000 (0.0 to 500.0).
0014	Pr£b	Read/Write: Time base for Ramps and Soaks. Range: 0 – 1 (seconds/minutes).

HOLDING REGISTERS	PARAMETER	REGISTER DESCRIPTION
0015	ct	PWM cycle period (in seconds). Range: 5 to 1000 (0.5 to 100.0).
0016	FrE9	Read/Write: Power grid frequency. Range: 0 – 1 (60/50 Hz).
0017	HYSF	On/Off control hysteresis (on the engineering unit of the selected type). Range: 0 to SPHL – SPLL
0018	FLEr	Read/Write: Filter strength on PV reading. Range: 0 – 20
0019	oull	Lower limit of output power. Range: 0 to 1000 (0.0 to 100.0 %).
0020	ouHL	Upper limit of output power. Range: 0 to 1000 (0.0 to 100.0 %).
0021~0022	Reserved	Internal use.
0023	Serial number high	First four numbers of the serial number. Range: 0 to 9999. Read-only.
0024	Serial number low	Last four numbers of the serial number. Range: 0 to 9999. Read-only.
0025	SV	Control Setpoint (Screen Setpoint). Range: From 5PLL to 5PHL .
0026	SPLL	Setpoint lower limit. Range: The minimum value depends on the input type set in LYPE (see Table 1). The maximum value is the value set in SPHL .
0027	SPHL	Setpoint upper limit. Range: From SPLL to the maximum allowed for the selected input in LYPE (see Table 1).
0028	Reserved	Internal use.
0029	oFF5	PV (Process Variable) Offset value. Range: From 5PLL to 5PHL .
0030	dPPo	PV decimal point position. Range: 0 to 3. $0 \rightarrow X.XXX$ $1 \rightarrow XX.XX$ $2 \rightarrow XXX.X$ $3 \rightarrow XXXX$
0031	5P.R 1	
0032	SPR2	
0033	SPA3	Alarm Setpoint.
0034	5P,R4	
0035	FuR I	Alarm function. Range: 0 to 10.
0036	FuR2	$0 \rightarrow \mathbf{oFF}$
0037	FuR3	
0038	FuA4	$2 \rightarrow 1 \ 3 \rightarrow Lo$ $4 \rightarrow H \ 1$ $5 \rightarrow d \ IF$ $6 \rightarrow d \ IFL$ $7 \rightarrow d \ IFH$ $8 \rightarrow HbL$ $9 \rightarrow HbH$ $10 \rightarrow HbLH$
0039	HAB 1	Alarm 1 hysteresis.

HOLDING REGISTERS	PARAMETER	REGISTER DESCRIPTION
0040	HAU5	Range: 0 to 9999 (0.00 to 99.99 %).
0041	нуяз	
0042	нуяч	
0043	FAbe	Type of PV input sensor. Range: 0 to 22.
0044	Rddr	Slave address. Range: 1 to 247
0045	ЬЯud	Communication Baud Rate. Range: 0 to 7. $0 \rightarrow 1200$ $1 \rightarrow 2400$ $2 \rightarrow 4800$ $3 \rightarrow 9600$ $4 \rightarrow 19200$ $5 \rightarrow 32400$
		$\begin{array}{c} 6 \rightarrow 57600 \\ 7 \rightarrow 115200 \end{array}$
0046	Ruto	Control mode. Range: $0 \rightarrow Manual$ $1 \rightarrow Automatic$
0047	run	Enable control. Range: $0 \rightarrow No$ $1 \rightarrow Yes$
0048	Act	Control action. Range: $0 \rightarrow \text{Direct}$ $1 \rightarrow \text{Reverse}$
0049	Atun	Enable Auto-Tuning. Range: $0 \rightarrow No$ $1 \rightarrow Yes$
0050	ьlя I	Alarm 1 initial blocking.
0051	PT BT	Range:
0052	LLA3	$0 \rightarrow No$
0053	6LA4	$1 \rightarrow \text{Yes}$
0054	Tecla	Remote action of the pressed key. Range: 0 to 9. $1 \rightarrow P$ key $2 \rightarrow \land$ key $4 \rightarrow \lor$ key $8 \rightarrow <$ key $9 \rightarrow P$ and < keys
0055	r SLL	Remote Setpoint lower limit. Range: The minimum value depends on the input type set in LYPE . The maximum value is the value set in LYPE .
0056	r SHL	Remote Setpoint upper limit. Range: The minimum value is the value set in ~5LL . The maximum value depends on the input type set in LYPE .
0057	1o 1	I/O channel function.

HOLDING REGISTERS	PARAMETER	REGISTER DESCRIPTION
0058	lo 2	
0059	1o 3	
0060	1o 4	
0061	lo 5	
0062	A IL I	Time 1 of alarm timer 1. Range: 0 to 6500 s.
0063	A 165	Time 2 of alarm timer 1 (in seconds). Range: Same as in A IL I .
0064	R2E 1	Time 1 of alarm timer 2 (in seconds). Range: Same as in A IL I .
0065	A5F5	Time 2 of alarm timer 2 (in seconds). Range: Same as in A IL I .
0066	SFSŁ	Time de Soft Start (in seconds). Range: 0 to 9999.
0067	un IL	Temperature unity. Range: 0 to 1. $0 \rightarrow {}^{\circ}C$ $1 \rightarrow {}^{\circ}F$
0068	ь IRS	Bias. Range: -100 to 100 %.
0069	Reserved	Internal use.
0070	R&S Segment	Running Ramps and Soaks segment number (read-only). Range: 0 to 9.
0071	Prn	Ramps and Soaks program to be viewed (edited). Range: 1 to 20.
0072	E Pr	Ramps and Soaks program being executed. Range: 0 to 20.
0073	R&S Time remaining	Indicates the remaining time of the Ramps and Soaks segment.
0074	59rt	Square root of a linear input. Range: $0 \rightarrow \text{Disable}$ $1 \rightarrow \text{Enable}$
0075	PV Calibration (Start)	Calibration operator to enter the range start value currently applied to the PV input.
0076	PV Calibration (End)	Calibration operator to enter the end-of-range value currently applied to the PV input.
0077	Remote Setpoint Calibration (Start)	Calibration operator to enter the range start value currently applied to the Remote Setpoint input.
0078	Remote Setpoint Calibration (End)	Calibration operator to enter the end-of-range value currently applied to the Remote Setpoint input.
0079	rELL	Retransmission lower limit.
0800	rEHL	Retransmission upper limit.
0081	FLSh	Enables the flashing upper display feature depending on the selected alarm. Range: 0 to 15.
0082	A3F 1	Time 1 of alarm timer 3 (in seconds). Range: Same as in A IL I .
0083	A3F5	Time 2 of alarm timer 3 (in seconds). Range: Same as in A IE2 .
0084	A4F 1	Time 1 of alarm timer 4 (in seconds). Range: Same as in A IL I .
0085	R4F5	Time 2 of alarm timer 4 (in seconds). Range: Same as in A IL2 .

HOLDING REGISTERS	PARAMETER	REGISTER DESCRIPTION
0086	rStr	Restores factory calibration. Range: 0 to 1 $0 \rightarrow No$ restore $1 \rightarrow Restore$ calibration
0087	PRSS	Writes the password. Always reads 0.
0088	Prot	Password protection level used. Range: 1 to 7.
0089	Prły	Serial channel parity. Range: 0 to 2 $0 \rightarrow No parity$ $1 \rightarrow Even$ $2 \rightarrow Odd$
0090~ 0097	Reserved	Internal use.
0098	Er5P	 Enable remote Setpoint. Range: 0 → Remote Setpoint depends on the I/O configuration 1 → Forces remote Setpoint
0099	Reserved	Internal use.
0100	PE I	Segment 1 event of program 1 (R&S). Range: 0 to 15.
0101	PE2	Segment 2 event of program 1 (R&S). Range: Same as in PE 1 .
0102	PE3	Segment 3 event of program 1 (R&S). Range: Same as in PE 1 .
0103	РЕЧ	Segment 4 event of program 1 (R&S). Range: Same as in PE 1 .
0104	PES	Segment 5 event of program 1 (R&S). Range: Same as in PE 1 .
0105	PEG	Segment 6 event of program 1 (R&S). Range: Same as in PE 1 .
0106	PEI	Segment 7 event of program 1 (R&S). Range: Same as in PE 1 .
0107	PEB	Segment 8 event of program 1 (R&S). Range: Same as in PE 1 .
0108	PES	Segment 9 event of program 1 (R&S). Range: Same as in PE 1 .
0109	PE I	Segment 1 event of program 2 (R&S). Range: Same as in PE 1 of program 1.
0110	PE2	Segment 2 event of program 2 (R&S). Range: Same as in PE 1 .
0111	PE3	Segment 3 event of program 2 (R&S). Range: Same as in PE 1 .
0112	PE4	Segment 4 event of program 2 (R&S). Range: Same as in PE 1 .
0113	PES	Segment 5 event of program 2 (R&S). Range: Same as in PE 1 .
0114	PEG	Segment 6 event of program 2 (R&S). Range: Same as in PE 1 .

HOLDING REGISTERS	PARAMETER	REGISTER DESCRIPTION
0115	PEI	Segment 7 event of program 2 (R&S). Range: Same as in PE 1 .
0116	PEB	Segment 8 event of program 2 (R&S). Range: Same as in PE 1 .
0117	PES	Segment 9 event of program 2 (R&S). Range: Same as in PE 1 .
0119	PE I	Segment 1 event of program 3 (R&S). Range: Same as in PE 1 of program 1.
0120	PE2	Segment 2 event of program 3 (R&S). Range: Same as in PE 1 .
0118	PE3	Segment 3 event of program 3 (R&S). Range: Same as in PE 1 .
0121	РЕЧ	Segment 4 event of program 3 (R&S). Range: Same as in PE 1 .
0122	PES	Segment 5 event of program 3 (R&S). Range: Same as in PE 1 .
0123	PEG	Segment 6 event of program 3 (R&S). Range: Same as in PE 1 .
0124	PEI	Segment 7 event of program 3 (R&S). Range: Same as in PE 1 .
0125	PEB	Segment 8 event of program 3 (R&S). Range: Same as in PE 1 .
0126	PES	Segment 9 event of program 3 (R&S). Range: Same as in PE 1 .
0127	PE I	Segment 1 event of program 4 (R&S). Range: Same as in PE 1 of program 1.
0128	PE2	Segment 2 event of program 4 (R&S). Range: Same as in PE 1 .
0129	PE3	Segment 3 event of program 4 (R&S). Range: Same as in PE 1 .
0130	РЕЧ	Segment 4 event of program 4 (R&S). Range: Same as in PE 1 .
0131	PES	Segment 5 event of program 4 (R&S). Range: Same as in PE 1 .
0132	PEG	Segment 6 event of program 4 (R&S). Range: Same as in PE 1 .
0133	РЕЛ	Segment 7 event of program 4 (R&S). Range: Same as in PE 1 .
0134	PEB	Segment 8 event of program 4 (R&S). Range: Same as in PE 1 .
0135	PES	Segment 9 event of program 4 (R&S). Range: Same as in PE 1 .
0136	PE I	Segment 1 event of program 5 (R&S). Range: Same as in PE 1 of program 1.
0137	PE2	Segment 2 event of program 5 (R&S). Range: Same as in PE 1 .
0138	PE3	Segment 3 event of program 5 (R&S). Range: Same as in PE 1 .

HOLDING REGISTERS	PARAMETER	REGISTER DESCRIPTION
0139	РЕЧ	Segment 4 event of program 5 (R&S). Range: Same as in PE 1 .
0140	PES	Segment 5 event of program 5 (R&S). Range: Same as in PE 1 .
0141	PE6	Segment 6 event of program 5 (R&S). Range: Same as in PE 1 .
0142	PEI	Segment 7 event of program 5 (R&S). Range: Same as in PE 1 .
0143	PEB	Segment 8 event of program 5 (R&S). Range: Same as in PE 1 .
0144	PES	Segment 9 event of program 5 (R&S). Range: Same as in PE 1 .
0145	PE I	Segment 1 event of program 6 (R&S). Range: Same as in PE 1 of program 1.
0146	PE2	Segment 2 event of program 6 (R&S). Range: Same as in PE 1 .
0147	PE3	Segment 3 event of program 6 (R&S). Range: Same as in PE 1 .
0148	PE4	Segment 4 event of program 6 (R&S). Range: Same as in PE 1 .
0149	PES	Segment 5 event of program 6 (R&S). Range: Same as in PE 1 .
0150	PEG	Segment 6 event of program 6 (R&S). Range: Same as in PE 1 .
0151	PEI	Segment 7 event of program 6 (R&S). Range: Same as in PE 1 .
0152	PEB	Segment 8 event of program 6 (R&S). Range: Same as in PE 1 .
0153	PES	Segment 9 event of program 6 (R&S). Range: Same as in PE 1 .
0154	PE I	Segment 1 event of program 7 (R&S). Range: Same as in PE 1 of program 1.
0155	PE2	Segment 2 event of program 7 (R&S). Range: Same as in PE 1 .
0156	PEB	Segment 3 event of program 7 (R&S). Range: Same as in PE 1 .
0157	РЕЧ	Segment 4 event of program 7 (R&S). Range: Same as in PE 1 .
0158	PES	Segment 5 event of program 7 (R&S). Range: Same as in PE 1 .
0159	РЕБ	Segment 6 event of program 7 (R&S). Range: Same as in PE 1 .
0160	РЕЛ	Segment 7 event of program 7 (R&S). Range: Same as in PE 1 .
0161	PEB	Segment 8 event of program 7 (R&S). Range: Same as in PE 1 .
0162	PES	Segment 9 event of program 7 (R&S). Range: Same as in PE 1 .

HOLDING REGISTERS	PARAMETER	REGISTER DESCRIPTION
0163	PE I	Segment 1 event of program 8 (R&S). Range: Same as in PE 1 of program 1.
0164	PE2	Segment 2 event of program 8 (R&S). Range: Same as in PE 1 .
0165	PE3	Segment 3 event of program 8 (R&S). Range: Same as in PE 1 .
0166	РЕЧ	Segment 4 event of program 8 (R&S). Range: Same as in PE 1 .
0167	PES	Segment 5 event of program 8 (R&S). Range: Same as in PE 1 .
0168	PEG	Segment 6 event of program 8 (R&S). Range: Same as in PE 1 .
0169	PEI	Segment 7 event of program 8 (R&S). Range: Same as in PE 1 .
0170	PEB	Segment 8 event of program 8 (R&S). Range: Same as in PE 1 .
0171	PES	Segment 9 event of program 8 (R&S). Range: Same as in PE 1 .
0172	PE I	Segment 1 event of program 9 (R&S). Range: Same as in PE 1 of program 1.
0173	PE2	Segment 2 event of program 9 (R&S). Range: Same as in PE 1 .
0174	PE3	Segment 3 event of program 9 (R&S). Range: Same as in PE 1 .
0175	РЕЧ	Segment 4 event of program 9 (R&S). Range: Same as in PE 1 .
0176	PES	Segment 5 event of program 9 (R&S). Range: Same as in PE 1 .
0177	РЕБ	Segment 6 event of program 9 (R&S). Range: Same as in PE 1 .
0178	PEI	Segment 7 event of program 9 (R&S). Range: Same as in PE 1 .
0179	PEB	Segment 8 event of program 9 (R&S). Range: Same as in PE 1 .
0180	PES	Segment 9 event of program 9 (R&S). Range: Same as in PE 1 .
0181	PE I	Segment 1 event of program 10 (R&S). Range: Same as in PE 1 of program 1.
0182	PE2	Segment 2 event of program 10 (R&S). Range: Same as in PE 1 .
0183	PE3	Segment 3 event of program 10 (R&S). Range: Same as in PE 1 .
0184	РЕЧ	Segment 4 event of program 10 (R&S). Range: Same as in PE 1 .
0185	PES	Segment 5 event of program 10 (R&S). Range: Same as in PE 1 .
0186	PEG	Segment 6 event of program 10 (R&S). Range: Same as in PE 1 .

HOLDING REGISTERS	PARAMETER	REGISTER DESCRIPTION
0187	PEI	Segment 7 event of program 10 (R&S). Range: Same as in PE 1 .
0188	PEB	Segment 8 event of program 10 (R&S). Range: Same as in PE 1 .
0189	PES	Segment 9 event of program 10 (R&S). Range: Same as in PE 1 .
0190	PE I	Segment 1 event of program 11 (R&S). Range: Same as in PE 1 of program 1.
0191	PE2	Segment 2 event of program 11 (R&S). Range: Same as in PE 1 .
0192	PEB	Segment 3 event of program 11 (R&S). Range: Same as in PE 1 .
0193	РЕЧ	Segment 4 event of program 11 (R&S). Range: Same as in PE 1 .
0194	PES	Segment 5 event of program 11 (R&S). Range: Same as in PE 1 .
0195	PEG	Segment 6 event of program 11 (R&S). Range: Same as in PE 1 .
0196	PEI	Segment 7 event of program 11 (R&S). Range: Same as in PE 1 .
0197	PEB	Segment 8 event of program 11 (R&S). Range: Same as in PE 1 .
0198	PES	Segment 9 event of program 11 (R&S). Range: Same as in PE 1 .
0199	PE I	Segment 1 event of program 12 (R&S). Range: Same as in PE 1 of program 1.
0200	PE2	Segment 2 event of program 12 (R&S). Range: Same as in PE 1 .
0201	PEB	Segment 3 event of program 12 (R&S). Range: Same as in PE 1 .
0202	РЕЧ	Segment 4 event of program 12 (R&S). Range: Same as in PE 1 .
0203	PES	Segment 5 event of program 12 (R&S). Range: Same as in PE 1 .
0204	РЕБ	Segment 6 event of program 12 (R&S). Range: Same as in PE 1 .
0205	PEI	Segment 7 event of program 12 (R&S). Range: Same as in PE 1 .
0206	PEB	Segment 8 event of program 12 (R&S). Range: Same as in PE 1 .
0207	PES	Segment 9 event of program 12 (R&S). Range: Same as in PE 1 .
0208	PE I	Segment 1 event of program 13 (R&S). Range: Same as in PE 1 of program 1.
0209	PE2	Segment 2 event of program 13 (R&S). Range: Same as in PE 1 .
0210	PE3	Segment 3 event of program 13 (R&S). Range: Same as in PE 1 .

HOLDING REGISTERS	PARAMETER	REGISTER DESCRIPTION
0211	РЕЧ	Segment 4 event of program 13 (R&S). Range: Same as in PE 1 .
0212	PES	Segment 5 event of program 13 (R&S). Range: Same as in PE 1 .
0213	PE6	Segment 6 event of program 13 (R&S). Range: Same as in PE 1 .
0214	PEI	Segment 7 event of program 13 (R&S). Range: Same as in PE 1 .
0215	PEB	Segment 8 event of program 13 (R&S). Range: Same as in PE 1 .
0216	PES	Segment 9 event of program 13 (R&S). Range: Same as in PE 1 .
0217	PE I	Segment 1 event of program 14 (R&S). Range: Same as in PE 1 of program 1.
0218	PE2	Segment 2 event of program 14 (R&S). Range: Same as in PE 1 .
0219	PE3	Segment 3 event of program 14 (R&S). Range: Same as in PE 1 .
0220	PE4	Segment 4 event of program 14 (R&S). Range: Same as in PE 1 .
0221	PES	Segment 5 event of program 14 (R&S). Range: Same as in PE 1 .
0222	PEG	Segment 6 event of program 14 (R&S). Range: Same as in PE 1 .
0223	PEI	Segment 7 event of program 14 (R&S). Range: Same as in PE 1 .
0224	PEB	Segment 8 event of program 14 (R&S). Range: Same as in PE 1 .
0225	PES	Segment 9 event of program 14 (R&S). Range: Same as in PE 1 .
0226	PE I	Segment 1 event of program 15 (R&S). Range: Same as in PE 1 of program 1.
0227	PE2	Segment 2 event of program 15 (R&S). Range: Same as in PE 1 .
0228	PE3	Segment 3 event of program 15 (R&S). Range: Same as in PE 1 .
0229	РЕЧ	Segment 4 event of program 15 (R&S). Range: Same as in PE 1 .
0230	PES	Segment 5 event of program 15 (R&S). Range: Same as in PE 1 .
0231	PEG	Segment 6 event of program 15 (R&S). Range: Same as in PE 1 .
0232	PEI	Segment 7 event of program 15 (R&S). Range: Same as in PE 1 .
0233	PEB	Segment 8 event of program 15 (R&S). Range: Same as in PE 1 .
0234	PES	Segment 9 event of program 15 (R&S). Range: Same as in PE 1 .

HOLDING REGISTERS	PARAMETER	REGISTER DESCRIPTION
0235	PE I	Segment 1 event of program 16 (R&S). Range: Same as in PE I of program 1.
0236	PE2	Segment 2 event of program 16 (R&S). Range: Same as in PE 1 .
0237	PE3	Segment 3 event of program 16 (R&S). Range: Same as in PE 1 .
0238	PE4	Segment 4 event of program 16 (R&S). Range: Same as in PE 1 .
0239	PES	Segment 5 event of program 16 (R&S). Range: Same as in PE 1 .
0240	PE6	Segment 6 event of program 16 (R&S). Range: Same as in PE 1 .
0241	PEI	Segment 7 event of program 16 (R&S). Range: Same as in PE 1 .
0242	PEB	Segment 8 event of program 16 (R&S). Range: Same as in PE 1 .
0243	PES	Segment 9 event of program 16 (R&S). Range: Same as in PE 1 .
0244	PE I	Segment 1 event of program 17 (R&S). Range: Same as in PE I of program 1.
0245	PE2	Segment 2 event of program 17 (R&S). Range: Same as in PE 1 .
0246	PE3	Segment 3 event of program 17 (R&S). Range: Same as in PE 1 .
0247	РЕЧ	Segment 4 event of program 17 (R&S). Range: Same as in PE 1 .
0248	PES	Segment 5 event of program 17 (R&S). Range: Same as in PE 1 .
0249	PE6	Segment 6 event of program 17 (R&S). Range: Same as in PE 1 .
0250	PEI	Segment 7 event of program 17 (R&S). Range: Same as in PE 1 .
0251	PEB	Segment 8 event of program 17 (R&S). Range: Same as in PE 1 .
0252	PES	Segment 9 event of program 17 (R&S). Range: Same as in PE 1 .
0253	PE I	Segment 1 event of program 18 (R&S). Range: Same as in PE 1 of program 1.
0254	PE2	Segment 2 event of program 18 (R&S). Range: Same as in PE 1 .
0255	PE3	Segment 3 event of program 18 (R&S). Range: Same as in PE 1 .
0256	РЕЧ	Segment 4 event of program 18 (R&S). Range: Same as in PE 1 .
0257	PES	Segment 5 event of program 18 (R&S). Range: Same as in PE 1 .
0258	PEG	Segment 6 event of program 18 (R&S). Range: Same as in PE 1 .

HOLDING REGISTERS	PARAMETER	REGISTER DESCRIPTION
0259	PEI	Segment 7 event of program 18 (R&S). Range: Same as in PE 1 .
0260	PEB	Segment 8 event of program 18 (R&S). Range: Same as in PE 1 .
0261	PES	Segment 9 event of program 18 (R&S). Range: Same as in PE 1 .
0262	PE I	Segment 1 event of program 19 (R&S). Range: Same as in PE 1 of program 1.
0263	PE2	Segment 2 event of program 19 (R&S). Range: Same as in PE 1 .
0264	PEB	Segment 3 event of program 19 (R&S). Range: Same as in PE 1 .
0265	РЕЧ	Segment 4 event of program 19 (R&S). Range: Same as in PE 1 .
0266	PES	Segment 5 event of program 19 (R&S). Range: Same as in PE 1 .
0267	РЕБ	Segment 6 event of program 19 (R&S). Range: Same as in PE 1 .
0268	PEI	Segment 7 event of program 19 (R&S). Range: Same as in PE 1 .
0269	PEB	Segment 8 event of program 19 (R&S). Range: Same as in PE 1 .
0270	PES	Segment 9 event of program 19 (R&S). Range: Same as in PE 1 .
0271	PE I	Segment 1 event of program 20 (R&S). Range: Same as in PE 1 of program 1.
0272	PE2	Segment 2 event of program 20 (R&S). Range: Same as in PE 1 .
0273	PEB	Segment 3 event of program 20 (R&S). Range: Same as in PE 1 .
0274	РЕЧ	Segment 4 event of program 20 (R&S). Range: Same as in PE 1 .
0275	PES	Segment 5 event of program 20 (R&S). Range: Same as in PE 1 .
0276	PE6	Segment 6 event of program 20 (R&S). Range: Same as in PE 1 .
0277	РЕЛ	Segment 7 event of program 20 (R&S). Range: Same as in PE 1 .
0278	PEB	Segment 8 event of program 20 (R&S). Range: Same as in PE 1 .
0279	PES	Segment 9 event of program 20 (R&S). Range: Same as in PE 1 .
0280	Ptol	Program 1 tolerance (Ramps and Soaks). Range: 0 to (5PHL - 5PLL) value.
0281	Ptol	Program 2 tolerance (Ramps and Soaks). Range: 0 to (5PHL - 5PLL) value.
0282	PtoL	Program 3 tolerance (Ramps and Soaks). Range: 0 to (SPHL - SPLL) value.

HOLDING REGISTERS	PARAMETER	REGISTER DESCRIPTION
0283	PtoL	Program 4 tolerance (Ramps and Soaks). Range: 0 to (SPHL - SPLL) value.
0284	PtoL	Program 5 tolerance (Ramps and Soaks). Range: 0 to (SPHL - SPLL) value.
0285	PtoL	Program 6 tolerance (Ramps and Soaks). Range: 0 to (5PHL - 5PLL) value.
0286	PtoL	Program 7 tolerance (Ramps and Soaks). Range: 0 to (5PHL - 5PLL) value.
0287	PtoL	Program 8 tolerance (Ramps and Soaks). Range: 0 to (SPHL - SPLL) value.
0288	PtoL	Program 9 tolerance (Ramps and Soaks). Range: 0 to (SPHL - SPLL) value.
0289	PtoL	Program 10 tolerance (Ramps and Soaks). Range: 0 to (SPHL - SPLL) value.
0290	PtoL	Program 11 tolerance (Ramps and Soaks). Range: 0 to (SPHL - SPLL) value.
0291	PtoL	Program 12 tolerance (Ramps and Soaks). Range: 0 to (SPHL - SPLL) value.
0292	PtoL	Program 13 tolerance (Ramps and Soaks). Range: 0 to (SPHL - SPLL) value.
0293	PtoL	Program 14 tolerance (Ramps and Soaks). Range: 0 to (SPHL - SPLL) value.
0294	PtoL	Program 15 tolerance (Ramps and Soaks). Range: 0 to (SPHL - SPLL) value.
0295	PtoL	Program 16 tolerance (Ramps and Soaks). Range: 0 to (SPHL - SPLL) value.
0296	PtoL	Program 17 tolerance (Ramps and Soaks). Range: 0 to (SPHL - SPLL) value.
0297	PtoL	Program 18 tolerance (Ramps and Soaks). Range: 0 to (SPHL - SPLL) value.
0298	PtoL	Program 19 tolerance (Ramps and Soaks). Range: 0 to (SPHL - SPLL) value.
0299	PtoL	Program 20 tolerance (Ramps and Soaks). Range: 0 to (SPHL - SPLL) value.
0300	LP	Program 1 link (Ramps and Soaks). Range: 0 to 20.
0301	LP	Program 2 link (Ramps and Soaks). Range: 0 to 20.
0302	LP	Program 3 link (Ramps and Soaks). Range: 0 to 20.
0303	LP	Program 4 link (Ramps and Soaks). Range: 0 to 20.
0304	LP	Program 5 link (Ramps and Soaks). Range: 0 to 20.
0305	LP	Program 6 link (Ramps and Soaks). Range: 0 to 20.
0306	LP	Program 7 link (Ramps and Soaks). Range: 0 to 20.

HOLDING REGISTERS	PARAMETER	REGISTER DESCRIPTION
0307	LP	Program 8 link (Ramps and Soaks). Range: 0 to 20.
0308	LP	Program 9 link (Ramps and Soaks). Range: 0 to 20.
0309	LP	Program 10 link (Ramps and Soaks). Range: 0 to 20.
0310	LP	Program 11 link (Ramps and Soaks). Range: 0 to 20.
0311	LP	Program 12 link (Ramps and Soaks). Range: 0 to 20.
0312	LP	Program 13 link (Ramps and Soaks). Range: 0 to 20.
0313	LP	Program 14 link (Ramps and Soaks). Range: 0 to 20.
0314	LP	Program 15 link (Ramps and Soaks). Range: 0 to 20.
0315	LP	Program 16 link (Ramps and Soaks). Range: 0 to 20.
0316	LP	Program 17 link (Ramps and Soaks). Range: 0 to 20.
0317	LP	Program 18 link (Ramps and Soaks). Range: 0 to 20.
0318	LP	Program 19 link (Ramps and Soaks). Range: 0 to 20.
0319	LP	Program 20 link (Ramps and Soaks). Range: 0 to 20.
0320	PE I	Time 1 of program 1. Range: 0 to 9999 minutes.
0321	PE2	Time 2 of program 1. Range: 0 to 9999 minutes.
0322	PE3	Time 3 of program 1. Range: 0 to 9999 minutes.
0323	PE4	Time 4 of program 1. Range: 0 to 9999 minutes.
0324	PES	Time 5 of program 1. Range: 0 to 9999 minutes.
0325	PEG	Time 6 of program 1. Range: 0 to 9999 minutes.
0326	PEI	Time 7 of program 1. Range: 0 to 9999 minutes.
0327	PEB	Time 8 of program 1. Range: 0 to 9999 minutes.
0328	PE9	Time 9 of program 1. Range: 0 to 9999 minutes.
0329	PE I	Time 1 of program 2. Range: 0 to 9999 minutes.
0330	PE2	Time 2 of program 2. Range: 0 to 9999 minutes.
0331	PE3	Time 3 of program 2. Range: 0 to 9999 minutes.
0332	РĿЧ	Time 4 of program 2. Range: 0 to 9999 minutes.
0333	PES	Time 5 of program 2. Range: 0 to 9999 minutes.
0334	PE6	Time 6 of program 2. Range: 0 to 9999 minutes.
0335	PEI	Time 7 of program 2. Range: 0 to 9999 minutes.
0336	PEB	Time 8 of program 2. Range: 0 to 9999 minutes.
0337	PE9	Time 9 of program 2. Range: 0 to 9999 minutes.
0338	PE I	Time 1 of program 3. Range: 0 to 9999 minutes.
0339	PE2	Time 2 of program 3. Range: 0 to 9999 minutes.
0340	PE3	Time 3 of program 3. Range: 0 to 9999 minutes.

HOLDING REGISTERS	PARAMETER	REGISTER DESCRIPTION
0341	PE4	Time 4 of program 3. Range: 0 to 9999 minutes.
0342	PES	Time 5 of program 3. Range: 0 to 9999 minutes.
0343	PE6	Time 6 of program 3. Range: 0 to 9999 minutes.
0344	PEI	Time 7 of program 3. Range: 0 to 9999 minutes.
0345	PEB	Time 8 of program 3. Range: 0 to 9999 minutes.
0346	PE9	Time 9 of program 3. Range: 0 to 9999 minutes.
0347	PE I	Time 1 of program 4. Range: 0 to 9999 minutes.
0348	PE2	Time 2 of program 4. Range: 0 to 9999 minutes.
0349	PE3	Time 3 of program 4. Range: 0 to 9999 minutes.
0350	РĿЧ	Time 4 of program 4. Range: 0 to 9999 minutes.
0351	PES	Time 5 of program 4. Range: 0 to 9999 minutes.
0352	PE6	Time 6 of program 4. Range: 0 to 9999 minutes.
0353	PEI	Time 7 of program 4. Range: 0 to 9999 minutes.
0354	PEB	Time 8 of program 4. Range: 0 to 9999 minutes.
0355	PE9	Time 9 of program 4. Range: 0 to 9999 minutes.
0356	PE I	Time 1 of program 5. Range: 0 to 9999 minutes.
0357	PE2	Time 2 of program 5. Range: 0 to 9999 minutes.
0358	PE3	Time 3 of program 5. Range: 0 to 9999 minutes.
0359	PE4	Time 4 of program 5. Range: 0 to 9999 minutes.
0360	PES	Time 5 of program 5. Range: 0 to 9999 minutes.
0361	PE6	Time 6 of program 5. Range: 0 to 9999 minutes.
0362	PEI	Time 7 of program 5. Range: 0 to 9999 minutes.
0363	PEB	Time 8 of program 5. Range: 0 to 9999 minutes.
0364	PE9	Time 9 of program 5. Range: 0 to 9999 minutes.
0365	PE I	Time 1 of program 6. Range: 0 to 9999 minutes.
0366	PE2	Time 2 of program 6. Range: 0 to 9999 minutes.
0367	PE3	Time 3 of program 6. Range: 0 to 9999 minutes.
0368	РĿЧ	Time 4 of program 6. Range: 0 to 9999 minutes.
0369	PES	Time 5 of program 6. Range: 0 to 9999 minutes.
0370	PE6	Time 6 of program 6. Range: 0 to 9999 minutes.
0371	PEI	Time 7 of program 6. Range: 0 to 9999 minutes.
0372	PEB	Time 8 of program 6. Range: 0 to 9999 minutes.
0373	PE9	Time 9 of program 6. Range: 0 to 9999 minutes.
0374	PE I	Time 1 of program 7. Range: 0 to 9999 minutes.
0375	PE2	Time 2 of program 7. Range: 0 to 9999 minutes.
0376	PE3	Time 3 of program 7. Range: 0 to 9999 minutes.
0377	PE4	Time 4 of program 7. Range: 0 to 9999 minutes.
0378	PES	Time 5 of program 7. Range: 0 to 9999 minutes.
0379	PE6	Time 6 of program 7. Range: 0 to 9999 minutes.
0380	PEI	Time 7 of program 7. Range: 0 to 9999 minutes.
0381	PEB	Time 8 of program 7. Range: 0 to 9999 minutes.
0382	PE9	Time 9 of program 7. Range: 0 to 9999 minutes.
0383	PE I	Time 1 of program 8. Range: 0 to 9999 minutes.
0384	PE2	Time 2 of program 8. Range: 0 to 9999 minutes.

HOLDING REGISTERS	PARAMETER	REGISTER DESCRIPTION
0385	PE3	Time 3 of program 8. Range: 0 to 9999 minutes.
0386	PE4	Time 4 of program 8. Range: 0 to 9999 minutes.
0387	PES	Time 5 of program 8. Range: 0 to 9999 minutes.
0388	PE6	Time 6 of program 8. Range: 0 to 9999 minutes.
0389	PEJ	Time 7 of program 8. Range: 0 to 9999 minutes.
0390	PEB	Time 8 of program 8. Range: 0 to 9999 minutes.
0391	PE9	Time 9 of program 8. Range: 0 to 9999 minutes.
0392	PE I	Time 1 of program 9. Range: 0 to 9999 minutes.
0393	PE2	Time 2 of program 9. Range: 0 to 9999 minutes.
0394	PE3	Time 3 of program 9. Range: 0 to 9999 minutes.
0395	PE4	Time 4 of program 9. Range: 0 to 9999 minutes.
0396	PES	Time 5 of program 9. Range: 0 to 9999 minutes.
0397	PE6	Time 6 of program 9. Range: 0 to 9999 minutes.
0398	PEI	Time 7 of program 9. Range: 0 to 9999 minutes.
0399	PEB	Time 8 of program 9. Range: 0 to 9999 minutes.
0400	PES	Time 9 of program 9. Range: 0 to 9999 minutes.
0401	PE I	Time 1 of program 10. Range: 0 to 9999 minutes.
0402	PE2	Time 2 of program 10. Range: 0 to 9999 minutes.
0403	PE3	Time 3 of program 10. Range: 0 to 9999 minutes.
0404	РЕЧ	Time 4 of program 10. Range: 0 to 9999 minutes.
0405	PES	Time 5 of program 10. Range: 0 to 9999 minutes.
0406	PE6	Time 6 of program 10. Range: 0 to 9999 minutes.
0407	PEJ	Time 7 of program 10. Range: 0 to 9999 minutes.
0408	PEB	Time 8 of program 10. Range: 0 to 9999 minutes.
0409	PE9	Time 9 of program 10. Range: 0 to 9999 minutes.
0410	PE I	Time 1 of program 11. Range: 0 to 9999 minutes.
0411	PE2	Time 2 of program 11. Range: 0 to 9999 minutes.
0412	PE3	Time 3 of program 11. Range: 0 to 9999 minutes.
0413	PE4	Time 4 of program 11. Range: 0 to 9999 minutes.
0414	PES	Time 5 of program 11. Range: 0 to 9999 minutes.
0415	PE6	Time 6 of program 11. Range: 0 to 9999 minutes.
0416	PEJ	Time 7 of program 11. Range: 0 to 9999 minutes.
0417	PEB	Time 8 of program 11. Range: 0 to 9999 minutes.
0418	PE9	Time 9 of program 11. Range: 0 to 9999 minutes.
0419	PE I	Time 1 of program 12. Range: 0 to 9999 minutes.
0420	PE2	Time 2 of program 12. Range: 0 to 9999 minutes.
0421	PE3	Time 3 of program 12. Range: 0 to 9999 minutes.
0422	PE4	Time 4 of program 12. Range: 0 to 9999 minutes.
0423	PES	Time 5 of program 12. Range: 0 to 9999 minutes.
0424	PE6	Time 6 of program 12. Range: 0 to 9999 minutes.
0425	PEJ	Time 7 of program 12. Range: 0 to 9999 minutes.
0426	PEB	Time 8 of program 12. Range: 0 to 9999 minutes.
0427	PES	Time 9 of program 12. Range: 0 to 9999 minutes.
0428	PE I	Time 1 of program 13. Range: 0 to 9999 minutes.

HOLDING REGISTERS	PARAMETER	REGISTER DESCRIPTION
0429	PE2	Time 2 of program 13. Range: 0 to 9999 minutes.
0430	PE3	Time 3 of program 13. Range: 0 to 9999 minutes.
0431	РĿЧ	Time 4 of program 13. Range: 0 to 9999 minutes.
0432	PES	Time 5 of program 13. Range: 0 to 9999 minutes.
0433	PE6	Time 6 of program 13. Range: 0 to 9999 minutes.
0434	PEI	Time 7 of program 13. Range: 0 to 9999 minutes.
0435	PEB	Time 8 of program 13. Range: 0 to 9999 minutes.
0436	PE9	Time 9 of program 13. Range: 0 to 9999 minutes.
0437	PE I	Time 1 of program 14. Range: 0 to 9999 minutes.
0438	PE2	Time 2 of program 14. Range: 0 to 9999 minutes.
0439	PE3	Time 3 of program 14. Range: 0 to 9999 minutes.
0440	РĿЧ	Time 4 of program 14. Range: 0 to 9999 minutes.
0441	PES	Time 5 of program 14. Range: 0 to 9999 minutes.
0442	PE6	Time 6 of program 14. Range: 0 to 9999 minutes.
0443	PEI	Time 7 of program 14. Range: 0 to 9999 minutes.
0444	PEB	Time 8 of program 14. Range: 0 to 9999 minutes.
0445	PE9	Time 9 of program 14. Range: 0 to 9999 minutes.
0446	PE I	Time 1 of program 15. Range: 0 to 9999 minutes.
0447	PE2	Time 2 of program 15. Range: 0 to 9999 minutes.
0448	PE3	Time 3 of program 15. Range: 0 to 9999 minutes.
0449	РĿЧ	Time 4 of program 15. Range: 0 to 9999 minutes.
0450	PES	Time 5 of program 15. Range: 0 to 9999 minutes.
0451	PE6	Time 6 of program 15. Range: 0 to 9999 minutes.
0452	PEI	Time 7 of program 15. Range: 0 to 9999 minutes.
0453	PEB	Time 8 of program 15. Range: 0 to 9999 minutes.
0454	PE9	Time 9 of program 15. Range: 0 to 9999 minutes.
0455	PE I	Time 1 of program 16. Range: 0 to 9999 minutes.
0456	PE2	Time 2 of program 16. Range: 0 to 9999 minutes.
0457	PE3	Time 3 of program 16. Range: 0 to 9999 minutes.
0458	РĿЧ	Time 4 of program 16. Range: 0 to 9999 minutes.
0459	PES	Time 5 of program 16. Range: 0 to 9999 minutes.
0460	PE6	Time 6 of program 16. Range: 0 to 9999 minutes.
0461	PEI	Time 7 of program 16. Range: 0 to 9999 minutes.
0462	PEB	Time 8 of program 16. Range: 0 to 9999 minutes.
0463	PE9	Time 9 of program 16. Range: 0 to 9999 minutes.
0464	PE I	Time 1 of program 17. Range: 0 to 9999 minutes.
0465	PE2	Time 2 of program 17. Range: 0 to 9999 minutes.
0466	PE3	Time 3 of program 17. Range: 0 to 9999 minutes.
0467	РЕЧ	Time 4 of program 17. Range: 0 to 9999 minutes.
0468	PES	Time 5 of program 17. Range: 0 to 9999 minutes.
0469	PE6	Time 6 of program 17. Range: 0 to 9999 minutes.
0470	PEJ	Time 7 of program 17. Range: 0 to 9999 minutes.
0471	PEB	Time 8 of program 17. Range: 0 to 9999 minutes.
0472	PE9	Time 9 of program 17. Range: 0 to 9999 minutes.

HOLDING REGISTERS	PARAMETER	REGISTER DESCRIPTION
0473	PE I	Time 1 of program 18. Range: 0 to 9999 minutes.
0474	PE2	Time 2 of program 18. Range: 0 to 9999 minutes.
0475	PE3	Time 3 of program 18. Range: 0 to 9999 minutes.
0476	РĿЧ	Time 4 of program 18. Range: 0 to 9999 minutes.
0477	PES	Time 5 of program 18. Range: 0 to 9999 minutes.
0478	PE6	Time 6 of program 18. Range: 0 to 9999 minutes.
0479	PEJ	Time 7 of program 18. Range: 0 to 9999 minutes.
0480	PEB	Time 8 of program 18. Range: 0 to 9999 minutes.
0481	PE9	Time 9 of program 18. Range: 0 to 9999 minutes.
0482	PE I	Time 1 of program 19. Range: 0 to 9999 minutes.
0483	PE2	Time 2 of program 19. Range: 0 to 9999 minutes.
0484	PE3	Time 3 of program 19. Range: 0 to 9999 minutes.
0485	РĿЧ	Time 4 of program 19. Range: 0 to 9999 minutes.
0486	PES	Time 5 of program 19. Range: 0 to 9999 minutes.
0487	PE6	Time 6 of program 19. Range: 0 to 9999 minutes.
0488	PEJ	Time 7 of program 19. Range: 0 to 9999 minutes.
0489	PEB	Time 8 of program 19. Range: 0 to 9999 minutes.
0490	PE9	Time 9 of program 19. Range: 0 to 9999 minutes.
0491	PE I	Time 1 of program 20. Range: 0 to 9999 minutes.
0492	PE2	Time 2 of program 20. Range: 0 to 9999 minutes.
0493	PE3	Time 3 of program 20. Range: 0 to 9999 minutes.
0494	РĿЧ	Time 4 of program 20. Range: 0 to 9999 minutes.
0495	PES	Time 5 of program 20. Range: 0 to 9999 minutes.
0496	PE6	Time 6 of program 20. Range: 0 to 9999 minutes.
0497	PEJ	Time 7 of program 20. Range: 0 to 9999 minutes.
0498	PEB	Time 8 of program 20. Range: 0 to 9999 minutes.
0499	PE9	Time 9 of program 20. Range: 0 to 9999 minutes.
0500	PSP0	Setpoint 0 of program 1. Range: From SPLL to the value set in SPHL .
0501	P5P 1	Setpoint 1 of program 1 (Ramps and Soaks). Range: Same as in PSPD .
0502	PSP2	Setpoint 2 of program 1 (Ramps and Soaks). Range: Same as in PSPD .
0503	PSP3	Setpoint 3 of program 1 (Ramps and Soaks). Range: Same as in P5PD .
0504	P5P4	Setpoint 4 of program 1 (Ramps and Soaks). Range: Same as in PSPD .
0505	PSP5	Setpoint 5 of program 1 (Ramps and Soaks). Range: Same as in PSPD .
0506	PSP6	Setpoint 6 of program 1 (Ramps and Soaks). Range: Same as in PSPD .
0507	PSPI	Setpoint 7 of program 1 (Ramps and Soaks). Range: Same as in P5PD .
0508	P5P8	Setpoint 8 of program 1 (Ramps and Soaks). Range: Same as in P5PD .

HOLDING REGISTERS	PARAMETER	REGISTER DESCRIPTION
0509	PSP9	Setpoint 9 of program 1 (Ramps and Soaks). Range: Same as in P5PD .
0510	PSPD	Setpoint 0 of program 2. Range: From 5PLL to the value set in 5PHL .
0511	PSP I	Setpoint 1 of program 2 (Ramps and Soaks). Range: Same as in P5PD .
0512	PSP2	Setpoint 2 of program 2 (Ramps and Soaks). Range: Same as in P5PD .
0513	PSP3	Setpoint 3 of program 2 (Ramps and Soaks). Range: Same as in P5PD .
0514	P5P4	Setpoint 4 of program 2 (Ramps and Soaks). Range: Same as in P5PD .
0515	PSPS	Setpoint 5 of program 2 (Ramps and Soaks). Range: Same as in P5PD .
0516	PSP6	Setpoint 6 of program 2 (Ramps and Soaks). Range: Same as in P5PD .
0517	PSPJ	Setpoint 7 of program 2 (Ramps and Soaks). Range: Same as in P5PD .
0518	PSPB	Setpoint 8 of program 2 (Ramps and Soaks). Range: Same as in P5PD .
0519	PSP9	Setpoint 9 of program 2 (Ramps and Soaks). Range: Same as in P5PD .
0520	PSPD	Setpoint 0 of program 3. Range: D From SPLL to the value set in SPHL .
0521	PSP I	Setpoint 1 of program 3 (Ramps and Soaks). Range: Same as in P5PD .
0522	PSP2	Setpoint 2 of program 3 (Ramps and Soaks). Range: Same as in P5PD .
0523	PSP3	Setpoint 3 of program 3 (Ramps and Soaks). Range: Same as in P5PD .
0524	PSPч	Setpoint 4 of program 3 (Ramps and Soaks). Range: Same as in P5PD .
0525	PSPS	Setpoint 5 of program 3 (Ramps and Soaks). Range: Same as in P5PD .
0526	PSP6	Setpoint 6 of program 3 (Ramps and Soaks). Range: Same as in P5PD .
0527	PSPJ	Setpoint 7 of program 3 (Ramps and Soaks). Range: Same as in P5PD .
0528	PSPB	Setpoint 8 of program 3 (Ramps and Soaks). Range: Same as in P5PD .
0529	PSP9	Setpoint 9 of program 3 (Ramps and Soaks). Range: Same as in P5PD .
0530	PSPD	Setpoint 0 of program 4. Range: From SPLL to the value set in SPHL .
0531	PSP I	Setpoint 1 of program 4 (Ramps and Soaks). Range: Same as in P5PD .
0532	PSP2	Setpoint 2 of program 4 (Ramps and Soaks). Range: Same as in P5PD .

HOLDING REGISTERS	PARAMETER	REGISTER DESCRIPTION
0533	PSP3	Setpoint 3 of program 4 (Ramps and Soaks). Range: Same as in P5PD .
0534	PSP4	Setpoint 4 of program 4 (Ramps and Soaks). Range: Same as in P5PD .
0535	PSPS	Setpoint 5 of program 4 (Ramps and Soaks). Range: Same as in P5PD .
0536	PSP6	Setpoint 6 of program 4 (Ramps and Soaks). Range: Same as in P5PD .
0537	PSPJ	Setpoint 7 of program 4 (Ramps and Soaks). Range: Same as in P5PD .
0538	PSPB	Setpoint <i>8</i> of program 4 (Ramps and Soaks). Range: Same as in P5PD .
0539	PSP9	Setpoint 9 of program 4 (Ramps and Soaks). Range: Same as in P5PD .
0540	PSPD	Setpoint 0 of program 5. Range: From SPLL to the value set in SPHL .
0541	PSP I	Setpoint 1 of program 5 (Ramps and Soaks). Range: Same as in P5PD .
0542	PSP2	Setpoint 2 of program 5 (Ramps and Soaks). Range: Same as in P5PD .
0543	PSP3	Setpoint 3 of program 5 (Ramps and Soaks). Range: Same as in P5PD .
0544	PSP4	Setpoint 4 of program 5 (Ramps and Soaks). Range: Same as in P5PD .
0545	PSPS	Setpoint 5 of program 5 (Ramps and Soaks). Range: Same as in P5PD .
0546	P5P6	Setpoint 6 of program 5 (Ramps and Soaks). Range: Same as in P5PD .
0547	P5P1	Setpoint 7 of program 5 (Ramps and Soaks). Range: Same as in P5PD .
0548	PSPB	Setpoint 8 of program 5 (Ramps and Soaks). Range: Same as in P5PD .
0549	PSP9	Setpoint 9 of program 5 (Ramps and Soaks). Range: Same as in P5PD .
0550	PSPD	Setpoint 0 of program 6. Range: From 5PLL to the value set in 5PHL .
0551	PSP I	Setpoint 1 of program 6 (Ramps and Soaks). Range: Same as in P5PD .
0552	PSP2	Setpoint 2 of program 6 (Ramps and Soaks). Range: Same as in P5PD .
0553	PSP3	Setpoint 3 of program 6 (Ramps and Soaks). Range: Same as in P5PD .
0554	Р5Рч	Setpoint 4 of program 6 (Ramps and Soaks). Range: Same as in P5PD .
0555	PSP5	Setpoint 5 of program 6 (Ramps and Soaks). Range: Same as in P5PD .
0556	P5P6	Setpoint 6 of program 6 (Ramps and Soaks). Range: Same as in P5PD .

HOLDING REGISTERS	PARAMETER	REGISTER DESCRIPTION
0557	P5P1	Setpoint 7 of program 6 (Ramps and Soaks). Range: Same as in P5PD .
0558	PSPB	Setpoint 8 of program 6 (Ramps and Soaks). Range: Same as in P5PD .
0559	PSP9	Setpoint 9 of program 6 (Ramps and Soaks). Range: Same as in P5PD .
0560	PSPD	Setpoint 0 of program 7. Range: From SPLL to the value set in SPHL .
0561	PSP I	Setpoint 1 of program 7 (Ramps and Soaks). Range: Same as in P5PD .
0562	PSP2	Setpoint 2 of program 7 (Ramps and Soaks). Range: Same as in P5PD .
0563	PSP3	Setpoint 3 of program 7 (Ramps and Soaks). Range: Same as in P5PD .
0564	PSP4	Setpoint 4 of program 7 (Ramps and Soaks). Range: Same as in P5PD .
0565	PSP5	Setpoint 5 of program 7 (Ramps and Soaks). Range: Same as in P5PD .
0566	PSP6	Setpoint 6 of program 7 (Ramps and Soaks). Range: Same as in P5PD .
0567	PSPJ	Setpoint 7 of program 7 (Ramps and Soaks). Range: Same as in P5PD .
0568	PSPB	Setpoint <i>8</i> of program 7 (Ramps and Soaks). Range: Same as in P5PD .
0569	PSP9	Setpoint 9 of program 7 (Ramps and Soaks). Range: Same as in P5PD .
0570	PSPD	Setpoint 0 of program 8. Range: From SPLL to the value set in SPHL .
0571	PSP I	Setpoint 1 of program 8 (Ramps and Soaks). Range: Same as in P5PD .
0572	PSP2	Setpoint 2 of program 8 (Ramps and Soaks). Range: Same as in P5PD .
0573	PSP3	Setpoint 3 of program 8 (Ramps and Soaks). Range: Same as in P5PD .
0574	Р5РЧ	Setpoint 4 of program 8 (Ramps and Soaks). Range: Same as in P5PD .
0575	PSP5	Setpoint 5 of program 8 (Ramps and Soaks). Range: Same as in P5PD .
0576	PSP6	Setpoint 6 of program 8 (Ramps and Soaks). Range: Same as in P5PD .
0577	P5P1	Setpoint 7 of program 8 (Ramps and Soaks). Range: Same as in P5PD .
0578	PSPB	Setpoint 8 of program 8 (Ramps and Soaks). Range: Same as in P5PD .
0579	PSP9	Setpoint 9 of program 8 (Ramps and Soaks). Range: Same as in P5PD .
0580	PSPD	Setpoint 0 of program 9. Range: From SPLL to the value set in SPHL .

HOLDING REGISTERS	PARAMETER	REGISTER DESCRIPTION
0581	PSP I	Setpoint 1 of program 9 (Ramps and Soaks). Range: Same as in P5PD .
0582	PSP2	Setpoint 2 of program 9 (Ramps and Soaks). Range: Same as in P5PD .
0583	PSP3	Setpoint 3 of program 9 (Ramps and Soaks). Range: Same as in P5PD .
0584	P5P4	Setpoint 4 of program 9 (Ramps and Soaks). Range: Same as in P5PD .
0585	PSP5	Setpoint 5 of program 9 (Ramps and Soaks). Range: Same as in P5PD .
0586	PSP5	Setpoint 6 of program 9 (Ramps and Soaks). Range: Same as in P5PD .
0587	PSPJ	Setpoint 7 of program 9 (Ramps and Soaks). Range: Same as in P5PD .
0588	PSPB	Setpoint <i>8</i> of program 9 (Ramps and Soaks). Range: Same as in P5PD .
0589	PSP9	Setpoint 9 of program 9 (Ramps and Soaks). Range: Same as in P5PD .
0590	PSPD	Setpoint 0 of program 10. Range: From SPLL to the value set in SPHL .
0591	PSP I	Setpoint 1 of program 10 (Ramps and Soaks). Range: Same as in P5PD .
0592	PSP2	Setpoint 2 of program 10 (Ramps and Soaks). Range: Same as in P5PD .
0593	PSP3	Setpoint 3 of program 10 (Ramps and Soaks). Range: Same as in P5PD .
0594	Р5РЧ	Setpoint 4 of program 10 (Ramps and Soaks). Range: Same as in P5PD .
0595	PSP5	Setpoint 5 of program 10 (Ramps and Soaks). Range: Same as in P5PD .
0596	PSP5	Setpoint 6 of program 10 (Ramps and Soaks). Range: Same as in P5PD .
0597	PSPJ	Setpoint 7 of program 10 (Ramps and Soaks). Range: Same as in P5PD .
0598	PSPB	Setpoint 8 of program 10 (Ramps and Soaks). Range: Same as in P5PD .
0599	P5P9	Setpoint 9 of program 10 (Ramps and Soaks). Range: Same as in P5PD .
0600	PSPD	Setpoint 0 of program 11. Range: From SPLL to the value set in SPHL .
0601	PSP I	Setpoint 1 of program 11 (Ramps and Soaks). Range: Same as in P5PD .
0602	PSP2	Setpoint 2 of program 11 (Ramps and Soaks). Range: Same as in P5PD .
0603	PSP3	Setpoint 3 of program 11 (Ramps and Soaks). Range: Same as in P5PD .
0604	P5P4	Setpoint 4 of program 11 (Ramps and Soaks). Range: Same as in P5PD .

HOLDING REGISTERS	PARAMETER	REGISTER DESCRIPTION
0605	PSP5	Setpoint 5 of program 11 (Ramps and Soaks). Range: Same as in P5PD .
0606	P5P6	Setpoint 6 of program 11 (Ramps and Soaks). Range: Same as in P5PD .
0607	PSPJ	Setpoint 7 of program 11 (Ramps and Soaks). Range: Same as in P5PD .
0608	PSPB	Setpoint <i>8</i> of program 11 (Ramps and Soaks). Range: Same as in P5PD .
0609	PSP9	Setpoint 9 of program 11 (Ramps and Soaks). Range: Same as in P5PD .
0610	PSPD	Setpoint 0 of program 12. Range: From 5PLL to the value set in 5PHL .
0611	PSP I	Setpoint 1 of program 12 (Ramps and Soaks). Range: Same as in P5PD .
0612	PSP2	Setpoint 2 of program 12 (Ramps and Soaks). Range: Same as in P5PD .
0613	PSP3	Setpoint 3 of program 12 (Ramps and Soaks). Range: Same as in P5PD .
0614	P5P4	Setpoint 4 of program 12 (Ramps and Soaks). Range: Same as in P5PD .
0615	PSP5	Setpoint 5 of program 12 (Ramps and Soaks). Range: Same as in P5PD .
0616	PSP5	Setpoint 6 of program 12 (Ramps and Soaks). Range: Same as in P5PD .
0617	PSPJ	Setpoint 7 of program 12 (Ramps and Soaks). Range: Same as in P5PD .
0618	PSPB	Setpoint 8 of program 12 (Ramps and Soaks). Range: Same as in P5PD .
0619	PSP9	Setpoint 9 of program 12 (Ramps and Soaks). Range: Same as in P5PD .
0620	PSPD	Setpoint 0 of program 13. Range: From SPLL to the value set in SPHL .
0621	PSP I	Setpoint 1 of program 13 (Ramps and Soaks). Range: Same as in P5PD .
0622	PSP2	Setpoint 2 of program 13 (Ramps and Soaks). Range: Same as in P5PD .
0623	PSP3	Setpoint 3 of program 13 (Ramps and Soaks). Range: Same as in P5PD .
0624	P5P4	Setpoint 4 of program 13 (Ramps and Soaks). Range: Same as in P5PD .
0625	PSP5	Setpoint 5 of program 13 (Ramps and Soaks). Range: Same as in P5PD .
0626	P5P5	Setpoint 6 of program 13 (Ramps and Soaks). Range: Same as in P5PD .
0627	PSPJ	Setpoint 7 of program 13 (Ramps and Soaks). Range: Same as in P5PD .
0628	PSPB	Setpoint 8 of program 13 (Ramps and Soaks). Range: Same as in P5PD .

HOLDING REGISTERS	PARAMETER	REGISTER DESCRIPTION
0629	P5P9	Setpoint 9 of program 13 (Ramps and Soaks). Range: Same as in P5PD .
0630	PSPD	Setpoint 0 of program 14. Range: From SPLL to the value set in SPHL .
0631	PSP I	Setpoint 1 of program 14 (Ramps and Soaks). Range: Same as in P5PD .
0632	PSP2	Setpoint 2 of program 14 (Ramps and Soaks). Range: Same as in P5PD .
0633	PSP3	Setpoint 3 of program 14 (Ramps and Soaks). Range: Same as in P5PD .
0634	P5P4	Setpoint 4 of program 14 (Ramps and Soaks). Range: Same as in P5PD .
0635	PSPS	Setpoint 5 of program 14 (Ramps and Soaks). Range: Same as in P5PD .
0636	PSP6	Setpoint 6 of program 14 (Ramps and Soaks). Range: Same as in P5PD .
0637	PSPJ	Setpoint 7 of program 14 (Ramps and Soaks). Range: Same as in P5PD .
0638	PSPB	Setpoint 8 of program 14 (Ramps and Soaks). Range: Same as in P5PD .
0639	PSP9	Setpoint 9 of program 14 (Ramps and Soaks). Range: Same as in P5PD .
0640	PSPD	Setpoint 0 of program 15. Range: From SPLL to the value set in SPHL .
0641	PSP I	Setpoint 1 of program 15 (Ramps and Soaks). Range: Same as in P5PD .
0642	PSP2	Setpoint 2 of program 15 (Ramps and Soaks). Range: Same as in P5PD .
0643	PSP3	Setpoint 3 of program 15 (Ramps and Soaks). Range: Same as in P5PD .
0644	Р5Рч	Setpoint 4 of program 15 (Ramps and Soaks). Range: Same as in P5PD .
0645	PSP5	Setpoint 5 of program 15 (Ramps and Soaks). Range: Same as in P5PD .
0646	PSP5	Setpoint 6 of program 15 (Ramps and Soaks). Range: Same as in P5PD .
0647	PSPJ	Setpoint 7 of program 15 (Ramps and Soaks). Range: Same as in P5PD .
0648	PSPB	Setpoint <i>8</i> of program 15 (Ramps and Soaks). Range: Same as in P5PD .
0649	PSP9	Setpoint 9 of program 15 (Ramps and Soaks). Range: Same as in P5PD .
0650	PSPD	Setpoint 0 of program 16. Range: From SPLL to the value set in SPHL .
0651	PSP I	Setpoint 1 of program 16 (Ramps and Soaks). Range: Same as in P5PD .
0652	PSP2	Setpoint 2 of program 16 (Ramps and Soaks). Range: Same as in P5PD .

HOLDING REGISTERS	PARAMETER	REGISTER DESCRIPTION
0653	PSP3	Setpoint 3 of program 16 (Ramps and Soaks). Range: Same as in P5PD .
0654	P5P4	Setpoint 4 of program 16 (Ramps and Soaks). Range: Same as in P5PD .
0655	PSPS	Setpoint 5 of program 16 (Ramps and Soaks). Range: Same as in P5PD .
0656	PSP6	Setpoint 6 of program 16 (Ramps and Soaks). Range: Same as in P5PD .
0657	PSPJ	Setpoint 7 of program 16 (Ramps and Soaks). Range: Same as in P5PD .
0658	PSPB	Setpoint 8 of program 16 (Ramps and Soaks). Range: Same as in P5PD .
0659	PSP9	Setpoint 9 of program 16 (Ramps and Soaks). Range: Same as in P5PD .
0660	PSPD	Setpoint 0 of program 17. Range: From SPLL to the value set in SPHL .
0661	PSP I	Setpoint 1 of program 17 (Ramps and Soaks). Range: Same as in P5PD .
0662	PSP2	Setpoint 2 of program 17 (Ramps and Soaks). Range: Same as in P5PD .
0663	PSP3	Setpoint 3 of program 17 (Ramps and Soaks). Range: Same as in P5PD .
0664	P5P4	Setpoint 4 of program 17 (Ramps and Soaks). Range: Same as in P5PD .
0665	PSP5	Setpoint 5 of program 17 (Ramps and Soaks). Range: Same as in P5PD .
0666	PSP6	Setpoint 6 of program 17 (Ramps and Soaks). Range: Same as in P5PD .
0667	PSP1	Setpoint 7 of program 17 (Ramps and Soaks). Range: Same as in P5PD .
0668	PSPB	Setpoint <i>8</i> of program 17 (Ramps and Soaks). Range: Same as in P5PD .
0669	PSP9	Setpoint 9 of program 17 (Ramps and Soaks). Range: Same as in P5PD .
0670	PSPD	Setpoint 0 of program 18. Range: From SPLL to the value set in SPHL .
0671	PSP I	Setpoint 1 of program 18 (Ramps and Soaks). Range: Same as in P5PD .
0672	PSP2	Setpoint 2 of program 18 (Ramps and Soaks). Range: Same as in P5PD .
0673	PSP3	Setpoint 3 of program 18 (Ramps and Soaks). Range: Same as in P5PD .
0674	Р5РЧ	Setpoint 4 of program 18 (Ramps and Soaks). Range: Same as in P5PD .
0675	PSPS	Setpoint 5 of program 18 (Ramps and Soaks). Range: Same as in P5PD .
0676	P5P6	Setpoint 6 of program 18 (Ramps and Soaks). Range: Same as in P5PD .

HOLDING REGISTERS	PARAMETER	REGISTER DESCRIPTION
0677	PSP 1	Setpoint 7 of program 18 (Ramps and Soaks). Range: Same as in P5PD .
0678	PSPB	Setpoint <i>8</i> of program 18 (Ramps and Soaks). Range: Same as in P5PD .
0679	PSP9	Setpoint 9 of program 18 (Ramps and Soaks). Range: Same as in P5PD .
0680	PSPD	Setpoint 0 of program 19. Range: From SPLL to the value set in SPHL .
0681	PSP I	Setpoint 1 of program 19 (Ramps and Soaks). Range: Same as in P5PD .
0682	PSP2	Setpoint 2 of program 19 (Ramps and Soaks). Range: Same as in P5PD .
0683	PSP3	Setpoint 3 of program 19 (Ramps and Soaks). Range: Same as in P5PD .
0684	PSP4	Setpoint 4 of program 19 (Ramps and Soaks). Range: Same as in P5PD .
0685	PSPS	Setpoint 5 of program 19 (Ramps and Soaks). Range: Same as in P5PD .
0686	P5P6	Setpoint 6 of program 19 (Ramps and Soaks). Range: Same as in P5PD .
0687	PSP1	Setpoint 7 of program 19 (Ramps and Soaks). Range: Same as in P5PD .
0688	PSPB	Setpoint <i>8</i> of program 19 (Ramps and Soaks). Range: Same as in P5PD .
0689	PSP9	Setpoint 9 of program 19 (Ramps and Soaks). Range: Same as in P5PD .
0690	PSPD	Setpoint 0 of program 20. Range: From SPLL to the value set in SPHL .
0691	PSP I	Setpoint 1 of program 20 (Ramps and Soaks). Range: Same as in P5PD .
0692	PSP2	Setpoint 2 of program 20 (Ramps and Soaks). Range: Same as in P5PD .
0693	PSP3	Setpoint 3 of program 20 (Ramps and Soaks). Range: Same as in P5PD .
0694	PSPч	Setpoint 4 of program 20 (Ramps and Soaks). Range: Same as in P5PD .
0695	PSP5	Setpoint 5 of program 20 (Ramps and Soaks). Range: Same as in P5PD .
0696	P5P6	Setpoint 6 of program 20 (Ramps and Soaks). Range: Same as in P5PD .
0697	PSP 1	Setpoint 7 of program 20 (Ramps and Soaks). Range: Same as in P5PD .
0698	PSPB	Setpoint 8 of program 20 (Ramps and Soaks). Range: Same as in P5PD .
0699	P5P9	Setpoint 9 of program 20 (Ramps and Soaks). Range: Same as in P5PD .
0700-0723	Reserved	Internal use.

HOLDING REGISTERS	PARAMETER	REGISTER DESCRIPTION
0724	MV 2	Read: Active output power (manual or automatic) of control output 2. Write: Not allowed. See address 28. Range: 0 to 1000 (0.0 to 100.0 %).
0725	РЪ2	Controller 2 proportional band (in percent). Range: 0 to 5000 (0.0 to 500.0 %)
0726	h9F5	On/Off control hysteresis (in the engineering unit of the selected type) of control output 2. Range: 0 to SPHL – SPLL .
0727	ct2	PWM cycle period (in seconds) of control output 2. Range: 5 to 1000 (0.5 to 100.0).
0728	ouLL2	Limite inferior da potência de saída da saída de controle 2. Range: 0 to 1000 (0.0 to 100.0 %).
0729	ouHL2	Limite superior da potência de saída da saída de controle 2. Range: 0 to 1000 (0.0 to 100.0 %).
0730	oLAP	Overlap between heating and cooling in the input type engineering unit.
0731	AREO I	
0732	∩R/E02	
0733	∩R/ED3	
0734	∩R/ED4	String with the product name.
0735	AREO5	
0736	∩RCE06	
0737	∩R/ED1	
0738	∩RCE08	
0739	codED I	
0740	codE02	
0741	codE03	String with the product code.
0742	codE04	
0743	codE05	
0744	LEA 1	Enable Latch function for alarm 1. $0 \rightarrow$ Latch function disabled $1 \rightarrow$ Latch function enabled
0745	LEA5	Enable Latch function for alarm 2. Range: Same as LER I .
0746	LEA3	Enable Latch function for alarm 3. Range: Same as LER I .
0747	LERY	Enable Latch function for alarm 4. Range: Same as LER I .
0748	r AL	Reset Alarm Latch. Bit array for individual reset of alarms that are holding alarms via Latch function. bit 0 – Recognizes alarm 1 retentive bit 1 – Recognizes alarm 2 retentive bit 2 – Recognizes alarm 3 retentive bit 3 – Recognizes alarm 4 retentive

16.4.3 STATUS WORDS

REGISTER	VALUE FORMAT	
	bit 0 – Alarm 1 (0 \rightarrow Disabled / 1 \rightarrow Enabled)	
	bit 1 – Alarm 2 (0 \rightarrow Disabled / 1 \rightarrow Enabled)	
	bit 2 – Alarm 3 (0 \rightarrow Disabled / 1 \rightarrow Enabled)	
	bit 3 – Alarm 4 (0 \rightarrow Disabled / 1 \rightarrow Enabled)	
	bit 4 – Input 0 - I/O 5 (0 \rightarrow Disabled / 1 \rightarrow Enabled)	
	bit 5 – Input 1 - I/O 3 (0 \rightarrow Disabled / 1 \rightarrow Enabled)	
	bit 6 – Input 2 - I/O 4 (0 \rightarrow Disabled / 1 \rightarrow Enabled)	
Status Word 1	bit 7 – Reserved	
	bit 8 – Value to detect hardware	
	bit 9 – Value to detect hardware	
	bit 10 – Value to detect hardware	
	bit 11 – Value to detect hardware	
	bit 12 - Reserved	
	bit 13 - Reserved	
	bit 14 - Reserved	
	bit 15 – Reserved	
	bit 0 – Automatic (0 \rightarrow Manual / 1 \rightarrow Automatic)	
	bit 1 – Run (0 \rightarrow Stop / 1 \rightarrow Run)	
	bit 2 – Control action 1 (0 \rightarrow Direct / 1 \rightarrow Reverse)	
	bit 3 – Reserved	
	bit 4 – Auto-tune (0 \rightarrow No / 1 \rightarrow Yes)	
	bit 5 – Alarm initial blocking 1 (0 \rightarrow No / 1 \rightarrow Yes)	
	bit 6 – Alarm initial blocking 2 (0 \rightarrow No / 1 \rightarrow Yes)	
Status Word 2	bit 7 – Alarm initial blocking 3 (0 \rightarrow No / 1 \rightarrow Yes)	
	bit 8 – Alarm initial blocking 4 (0 \rightarrow No / 1 \rightarrow Yes)	
	bit 9 – Unity (0 \rightarrow °C / 1 \rightarrow °F)	
	bit 10 - Reserved	
	bit 11 – Output 1 status	
	bit 12 – Output 2 status	
	bit 13 – Output 3 status	
	bit 14 – Output 4 status	
	Dit 15 – Output 5 status	
	bit 0 – Very low PV conversion (0 \rightarrow No / 1 \rightarrow Yes)	
	bit 1 – Negative conversion after calibration (0 \rightarrow No / 1 \rightarrow Yes)	
	bit 2 – Very high PV conversion ($0 \rightarrow No / 1 \rightarrow Yes$)	
	bit 3 – Exceeded linearization limit (0 \rightarrow No / 1 \rightarrow Yes)	
	bit 4 – The Pt100 cable resistance is too high (0 \rightarrow No / 1 \rightarrow Yes)	
	bit 5 – Auto-Zero conversion out-of-range ($0 \rightarrow No / 1 \rightarrow Yes$)	
	bit 6 – Cold Junction conversion out-ot-range ($0 \rightarrow No / 1 \rightarrow Yes$)	
Status Word 3	Dit / - Reserved	
	bit 0 Reserved	
	bit $11 - \text{Deserved}$	
	hit 12 - Reserved	
	hit 13 - Reserved	
	hit 14 - Reserved	
	hit 15 - Reserved	
	bit to those the	

You can only write to the digital output bits when the outputs are set to Off in the controller I/O configuration.

COIL STATUS	OUTPUT DESCRIPTION
0	Output 1 status (I/O1)
1	Output 2 status (I/O2)
2	Output 3 status (I/O3)
3	Output 4 status (I/O4)
4	Output 5 status (I/O5)

Table 15

16.5 EXCEPTION RESPONSES – ERROR CONDITIONS

When receiving a command, the Modbus protocol checks the CRC of the received data block. If there is a CRC error during reception, the master will receive no response.

After receiving an error-free packet, the controller processes the packet and verifies whether the request is valid or not. If invalid, an exception response, containing the corresponding error code, will be sent. In exception responses, the field corresponding to the Modbus command in the response will be added to 80 H.

If a command writing a value to a parameter has a value outside the allowed range, the maximum allowed value for this parameter will be forced, which will return this as the response.

The controller ignores the read commands in Broadcast. That is, there will be no response. You can only write in Broadcast mode.

ERROR CODES	ERROR DESCRIPTION		
01	Invalid or non-existent command.		
02	Register number invalid or out of range.		
03	Number of registers invalid or out of range.		

Table 16

16.6 CONFIGURING I/O PARAMETERS

16.6.1 N1200 CONTROLLER

I/O FUNCTION	CODE		I/O TYPE
No function	0	oFF	Output
Alarm output 1	1	R I	Output
Alarm output 2	2	R2	Output
Alarm output 3	3	RB	Output
Alarm output 4	4	RY	Output
Loop Break Detection (LBD) function output	5	LЪd	Output
Control output (Relay or Digital Pulse)	6	ctrL	Output
Switch between Automatic/Manual modes	7	ī.Rn	Digital Input
Switch between Run/Stop modes	8	run	Digital Input
Select remote SP	9	r SP	Digital Input
Freeze the program	10	HPrG	Digital Input
Select program 1	11	Pr l	Digital Input
Analog control output (0 to 20 mA)	12	C.0.20	Analog Output
Analog control output (4 to 20mA)	13	C.420	Analog Output
PV retransmission (0 to 20 mA)	14	P.0.20	Analog Output
PV retransmission (4 to 20 mA)	15	P.420	Analog Output
SP retransmission (0 to 20 mA)	16	5.0.20	Analog Output
SP retransmission (4 to 20 mA)	17	5.420	Analog Output

16.6.2 N1200-HC CONTROLLER

I/O FUNCTION	CODE		I/O TYPE
No function	0	oFF	Output
Alarm output 1	1	R I	Output
Alarm output 2	2	R2	Output
Alarm output 3	3	RB	Output
Alarm output 4	4	R4	Output
Loop Break Detection (LBD) function output	5	Lbd	Output
Control output 1 (Relay or Digital Pulse)	6	[tr	Output
Control output 2 (Relay or Digital Pulse)	7	[tr2	Output
Switch between Automatic/Manual modes	8	ī:An	Digital Input
Switch between Run/Stop modes	9	run	Digital Input
Select remote SP	10	r SP	Digital Input
Freeze the program	11	HPrG	Digital Input
Select program 1	12	Pr l	Digital Input
Analog control output 1 (0 to 20mA)	13	C.0.20	Analog Output
Analog control output 1 (4 to 20mA)	14	C.420	Analog Output
Analog control output 2 (0 to 20mA)	15	C.0.20	Analog Output
Analog control output 2 (4 to 20mA)	16	C.420	Analog Output
PV retransmission (0 to 20 mA)	17	P.0.20	Analog Output
PV retransmission (4 to 20 mA)	18	P.420	Analog Output
SP retransmission (0 to 20 mA)	19	5.0.20	Analog Output
SP retransmission (4 to 20 mA)	20	5420	Analog Output